

GENIUS

THE INGENIOUS ENERGY-SAVING
CONTROLLER

INSTALLATION & OPERATION GUIDE



GENIUS BLE100

TABLE OF CONTENTS

GENIUS BLE 100

The following operating instructions will guide you during commissioning and use of your GENIUS BLE 100 and answer all essential questions. Please read these operating instructions carefully before using your GENIUS BLE 100.


1.	Scope of Delivery	3
2.	Intended Use	4
3.	Warning / Safety	4
4.	Introduction GENIUS BLE 100	5
5.	Controls and Display Elements	6
6.	Installation and Start-Up	7
	6.1 Inserting / Changing Batteries	7
	6.2 Installation at the Radiator	8
	6.3 Adapters	9
	6.4 Adaptation	10
	6.5 Disassembly	10
7.	Temperature Setting	11
8.	GENIUS App	11
	8.1 Devices (App)	13
	8.2 Temperature (App)	13
	8.3 Heating Profile (App)	14
	8.4 Holiday Function (App)	14
	8.5 Settings (App)	15
	8.6 Support (App)	15
9.	Further Functions	16
10.	Cleaning and Storage	16
11.	Error Messages and Help	17
12.	Technical Specifications	18
13.	Support and Contact	18
14.	Environmental Information	19
15.	Warranty	19

1. SCOPE OF DELIVERY


GENIUS BLE 100

- 1x GENIUS BLE100
- 1x Quick Start Guide
- 2x AA LR6 batteries
- 3x Adapters (Danfoss RA / RAV / RAVL)
- 1x Screw for Adapter


HINWEIS: The following figures are for illustrative purpose only and can differ from the real product.

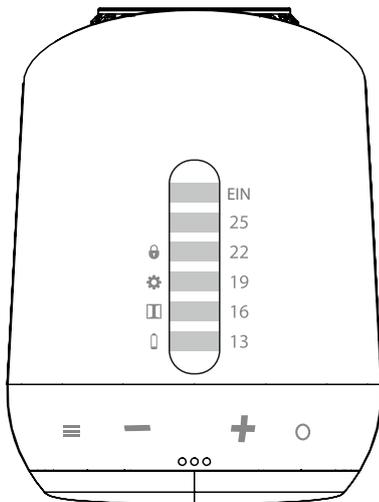


GENIUS BLE 100
Energy-Saving Controller

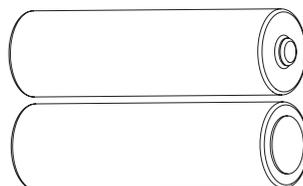

2x Batteries AA LR6

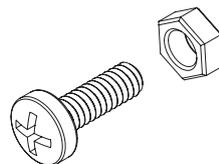

Screw for Adapter

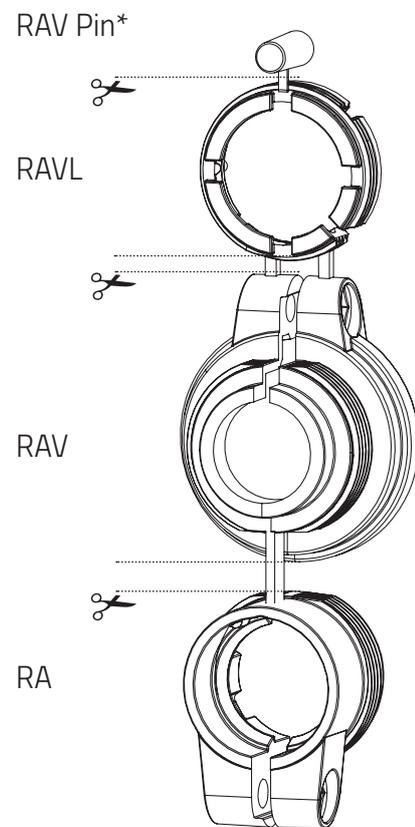

* When using the RAV adapter, you need the RAV Pin for the extension of the valve stem.

NOTE: Please check the delivery scope for completeness.

2. INTENDED USE

GENIUS BLE 100

The Genius BLE 100 is a programmable electric remote control thermostat for controlling radiators. Only operate the device indoors. Any use other than that described in this operating manual is not intended and will result in exclusion of warranty and liability. This also applies to conversions and/or modifications. Read the operating instructions carefully and keep them in a safe place. Only pass the product on to third parties together with the operating instructions.

3. WARNING / SAFETY

SAFETY INSTRUCTIONS

- GENIUS BLE 100 is designed for use in buildings.
- Operate GENIUS BLE 100 only as described in the user manual
- GENIUS BLE 100 should only be put to use in a dry and dust-free place, away from direct sunlight.
- Do not keep using the device when there is obvious damage.
- GENIUS BLE 100 may not be rebuilt, modified or opened



WARNING! RISK OF EXPLOSION!

Improper handling of batteries can lead to explosion.

- Do not heat batteries and do not throw batteries into an open fire.
- Do not place batteries in direct sunlight.
- Protect batteries from excessive heat.
- Do not short-circuit the batteries.
- Never attempt to charge non-rechargeable batteries.
- Never disassemble batteries.
- Do not use new and used batteries together.
- Observe the correct polarity (+/-) when inserting the batteries.
- Before inserting the batteries, clean the batteries and the contacts in the thermostat.

WARNING! RISK OF ACID BURNS!


Leaking battery acid can lead to burns.

- Avoid contact of battery acid with skin, eyes and mucous membranes.
- In case of contact with battery acid, rinse the affected areas immediately with plenty of clear water and consult a doctor.

WARNING! RISK OF INJURY!

When children play with the thermostat or packaging, they might swallow small parts and suffocate.

- Do not let children play with the thermostat or packaging.
- Keep batteries away from children. Seek medical attention immediately if batteries are swallowed.

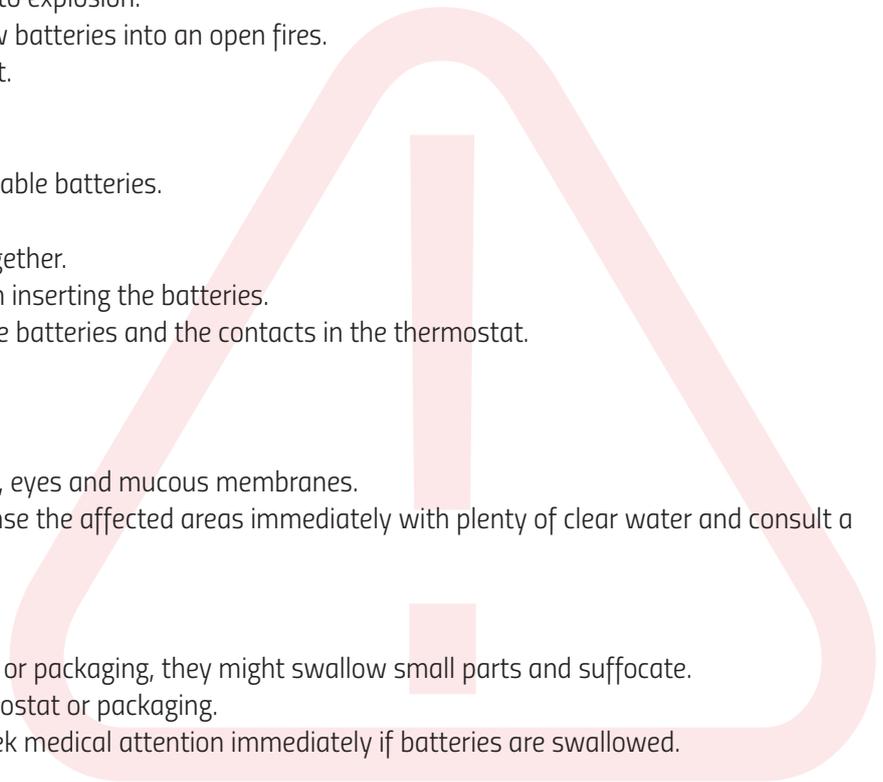

4. INTRODUCTION GENIUS BLE100

GENIUS BLE 100

Thank you for purchasing a product from Eurotronic Technology GmbH. This device is designed to adjust the temperature in your rooms comfortably and completely according to your needs while helping you to reduce your heating costs effectively.

All development and production are 100% „Made in Germany“, guaranteeing the highest quality and technology standards. These operating instructions will help you to put your device into operation quickly and easily.

GENIUS BLE 100

The GENIUS BLE 100 energy-saving controller is an intelligent radiator controller for modern and simple operation, which can be conveniently programmed and controlled via Bluetooth (from home) with the free app.



Save heating costs through energy-efficient control.



Touch control enables perfect control as well as simple and clear operation.



Simple installation without intervention in the heating system.




Bluetooth enables easy operation and control via the free app.

5. CONTROLS AND DISPLAY ELEMENTS

GENIUS BLE 100

To enter the menu, press the **MENU** button. Use the PLUS/MINUS buttons to navigate through the menu.

In normal mode, you can set the temperature with **PLUS** and **MINUS**.

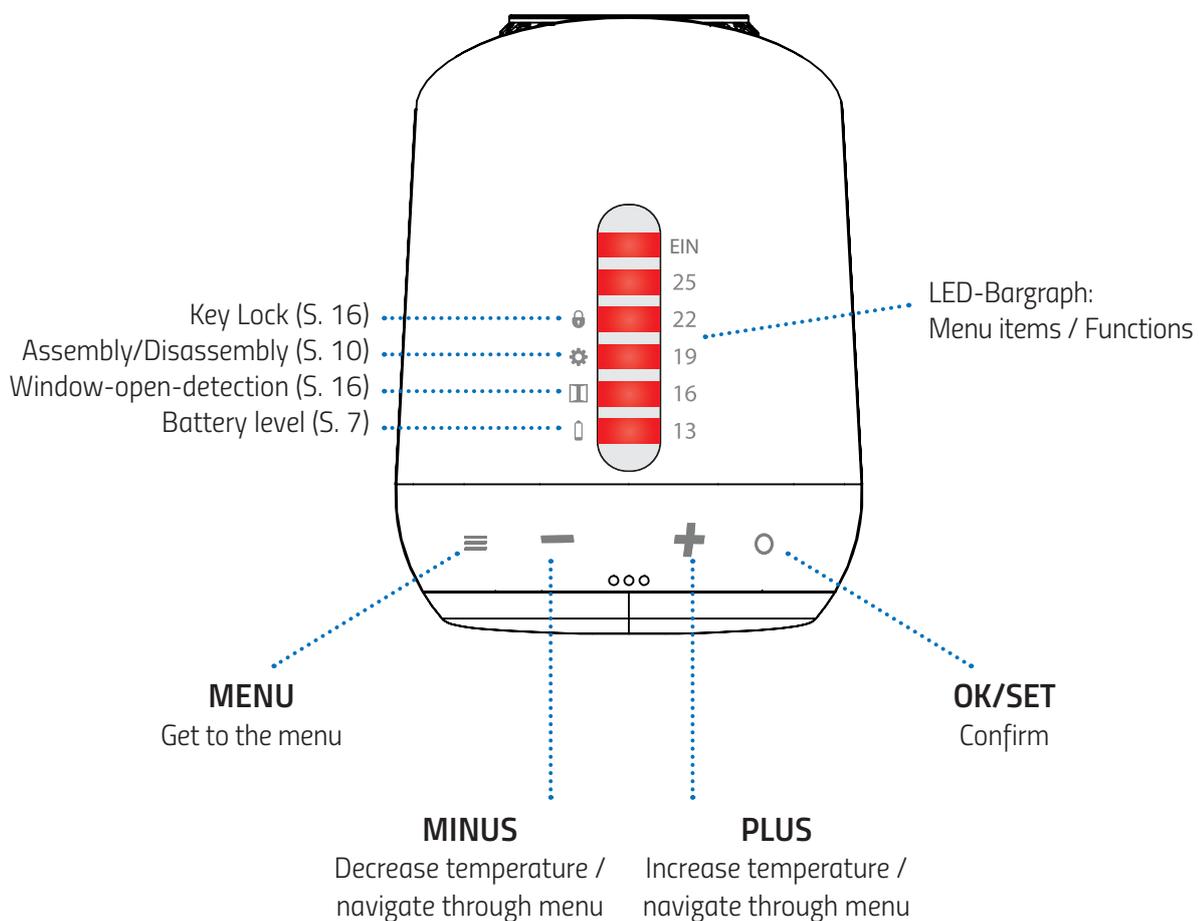

Manual Operation:

Use **PLUS/MINUS** to manually change the room temperature at any time. In AUTO mode, this manually set temperature remains until the next setting point. GENIUS BLE100 then switches back to the set heating programme.

6. INSTALLATION AND START-UP



GENIUS BLE 100

6.1 INSERTING/CHANGING BATTERIES

1. Remove the battery cover by pulling it upwards at the notch (Fig. 1).
2. Now insert the batteries. **Pay attention to the correct polarity! Do not use rechargeable batteries.**
3. Place the battery cover back on the GENIUS BLE 100 (Fig. 2) by pressing until it clicks.

The GENIUS BLE 100 is only in menu mode after you have inserted the batteries during initial commissioning and after resetting to the factory settings. The menu item Assembly/Disassembly ⚙ flashes.

- When the batteries are changed, this stage is skipped and the adaptation run is carried out automatically.
- The configuration is retained if the battery is changed later. Please note:
 - The key lock is deactivated.
 - The target temperature is set to 16°.

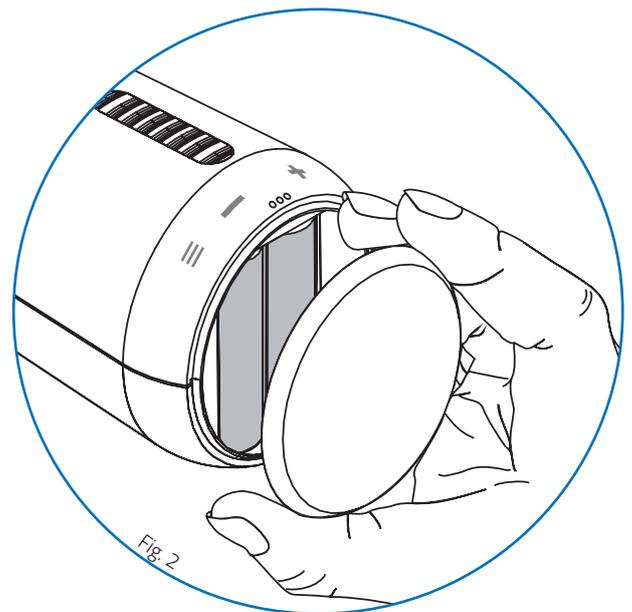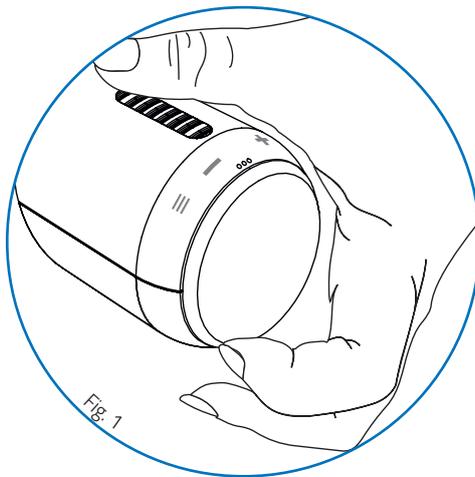

BATTERY:

If the batteries are weak, the battery LED will flash continuously until the batteries are changed.



6.2 INSTALLATION AT THE RADIATOR




GENIUS BLE 100

GENIUS BLE 100 can easily be mounted on all known valve bodies (see adapter list at: <https://eurotronic.org/service/faq/>).

1. Unscrew the old thermostatic head completely, loosen the fastening and pull it off the valve (Fig. 3)
2. If necessary, select a suitable adapter and mount it on the valve (Fig. 4)
3. Screw the thermostat onto the valve or adapter by turning the union nut clockwise (Fig.5).

CAUTION:

Make sure that the device is in the installation mode even if it is installed/removed later.
Only assemble/disassemble in this position.

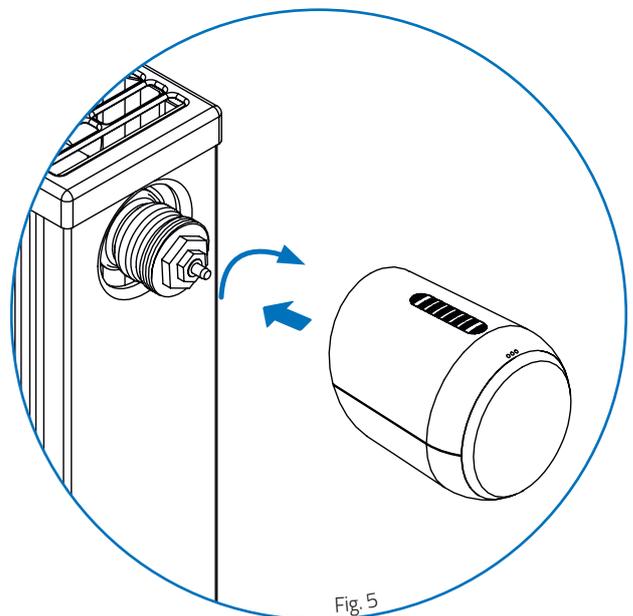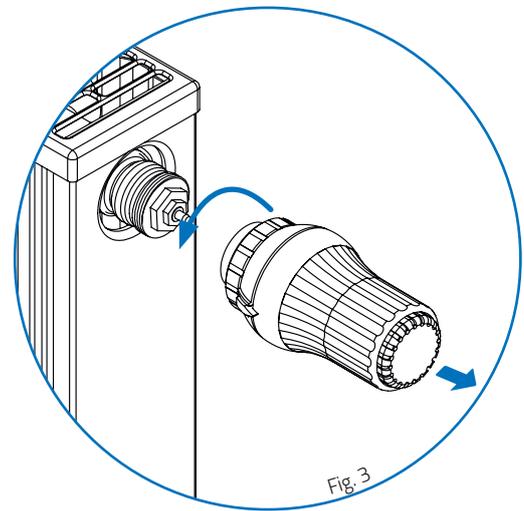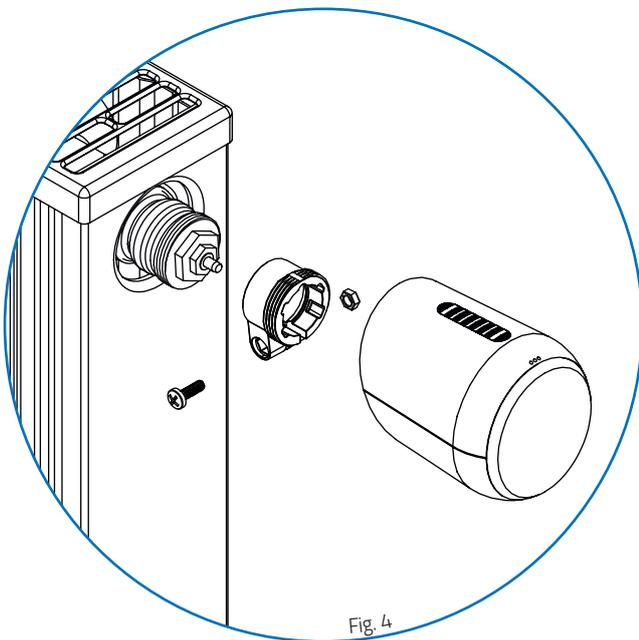

6.3 ADAPTERS

GENIUS BLE 100

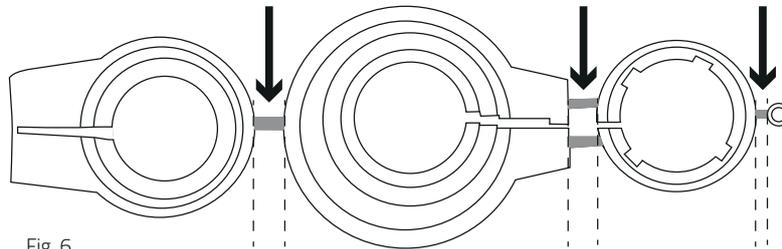


Fig. 6

NOTE:

Remove the connectors of the plastic adapters completely (Fig. 6) before using one of the included adapters! For Danfoss RA/RAV, use the enclosed screw and nut.



For the following valves no adapter is required:


Heimeier; Junkers Landys+Gyr; MNG; Honeywell; Braukmann, as these have a thread of M30 x 1,5 mm. The adapters for Danfoss RAV (pin must be plugged on the valve tappet) Danfoss RA and Danfoss RAVL are included.

For the following valves you need an adapter:

Herz M28 x 1,5 mm; Comap M28 x 1,5 mm; Vaillant 30,5 mm; Oventrop M30 x 1,0 mm; Meges M38 x 1,5 mm; Ondal M38 x 1,5 mm; Giacomini 22,6 mm; Rosswainer M33 x 2,0 mm; Markaryd M28 x 1,0 mm; Ista M32 x 1,0 mm; Vama M28 x 1,0 mm; Pettinaroli M28 x 1,5 mm; T+A M28 x 1,5 mm; Gampper 1/2/6; Danfoss RA/RAV/RAVL.

For additional adapters, please visit: <http://shop.eurotronic.org>

If you are not sure which valve you have, please visit: www.eurotronic.org/service/faq/ and check the adapter list.

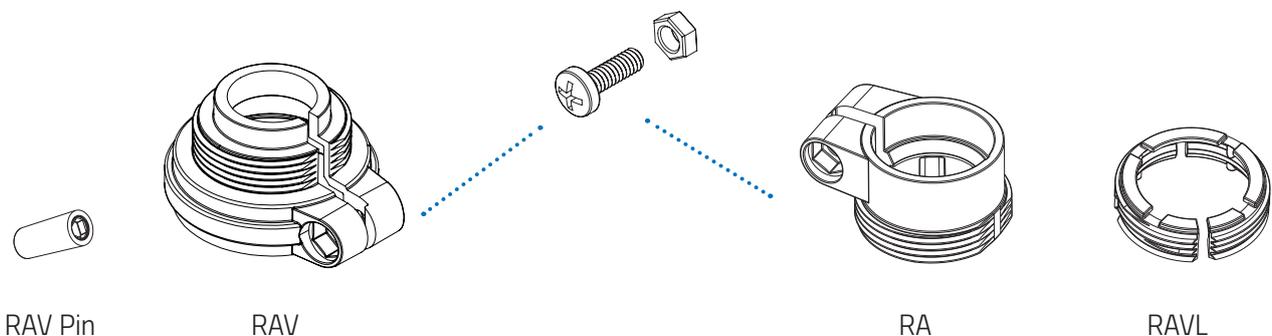

RAV Pin

RAV

RA

RAVL

6.4 ADAPTATION


GENIUS BLE 100

After installation, GENIUS BLE 100 can start adapting. The LED for Assembly/Disassembly ⚙️ is already flashing, confirm the adaptation by pressing and holding the OK/SET button (3 seconds). The adaptation starts after confirmation. The device now adapts to the stroke of your valve body. To do this, the valve is now opened and closed several times to learn the respective end points. A running light is indicated by the LEDs. After successful adaptation, the GENIUS BLE 100 switches to normal operation and the LEDs indicate the setpoint temperature. After approx. 5 seconds the thermostat switches to standby mode.

- If a new adaptation is necessary, e.g. if your radiator does not become cold in the OFF position, please select Assembly/Disassembly ⚙️ in the menu. Confirm with **OK/SET** (3 seconds) and start the adaptation again
- When the Assembly/Disassembly LED ⚙️ flashes again, place the GENIUS BLE 100 on the radiator valve and then briefly remove the batteries to reset.

6.5 DISASSEMBLY


To remove GENIUS BLE 100, press the **MENU** button on your controller. USE **PLUS/MINUS** to navigate to the menu item for Assembly/Disassembly ⚙️ and confirm with **OK/SET**. A running light is indicated by the LEDs. Wait briefly until the setting LED flashes. Now turn the union nut counterclockwise and remove the GENIUS BLE 100 from the valve (Fig. 7).

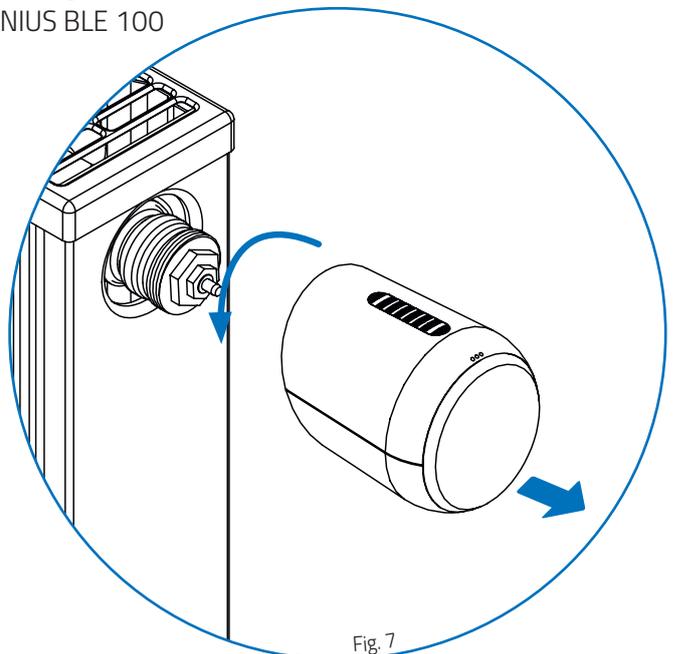

7. TEMPERATURE SETTING

GENIUS BLE 100

The temperature can be set as desired using the **PLUS** and **MINUS** buttons. The temperature is always increased or decreased in 1.5° steps.

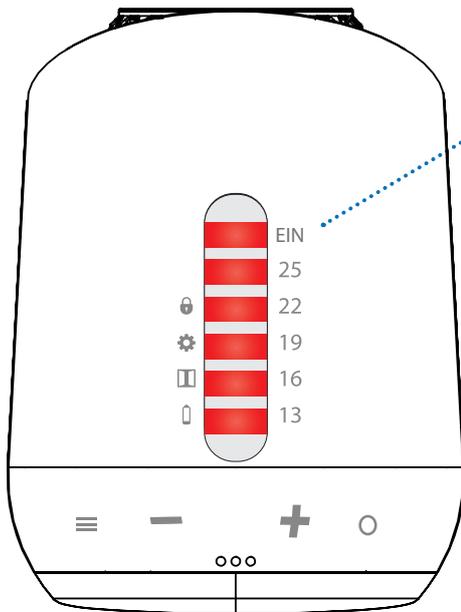

All 6 LEDs on: > 28° = heating ON (valve fully open, no regulation)

LED 1 to 5 on, 6 flashes: 28°

LED 1 to 5 on: 26,5°

LED 1 to 4 on, 5 flashes: 25°

LED 1 to 4 on: 23,5°

LED 1 to 3 on, 4 flashes: 22°

LED 1 to 3 on: 20,5°

LED 1 and 2 on, 3 flashes: 19°

LED 1 and 2 on: 17,5°

LED 1 on, 2 flashes: 16°

LED 1 on: 14,5

LED 1 flashes: 13°

no LED on: < 8° = heating OFF (anti-freeze function active)

8. GENIUS APP

To enable data exchange between the GENIUS BLE 100 and your smartphone or tablet, the following steps must be followed:

- Make sure your smartphone has Bluetooth enabled (requires the availability of Bluetooth 4.2).
- Download the free Eurotronic GENIUS app from the Google Play Store or App Store. Alternatively, scan the QR code with your smartphone.



When the app is installed, the operating system (Android) asks for permission to access the current location. This query must be answered with „YES“ to avoid errors during the Bluetooth connection.

NOTE: The information „current location“ is not required by the Eurotronic Genius app, but by the operating system for the Bluetooth connection.




8. GENIUS APP

GENIUS BLE 100



NOTES:

- The following description refers to the Android app as an example. Minor deviations may occur during operation of the iOS app.
- Please always use the latest version of the app from the Google Play Store or App Store. Some descriptions in this manual may differ with newer versions of the app.
- During operation, a Bluetooth connection must first be established to the device before an action can be performed. You will therefore notice a delayed response to your controls.

Start the app.

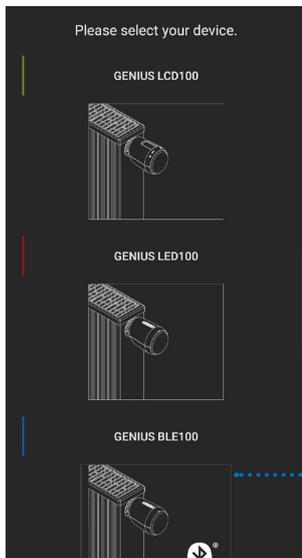


Please select your device:
GENIUS BLE100.

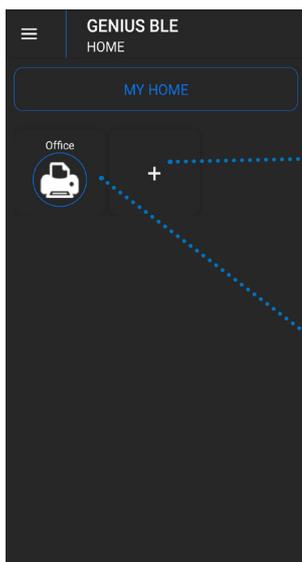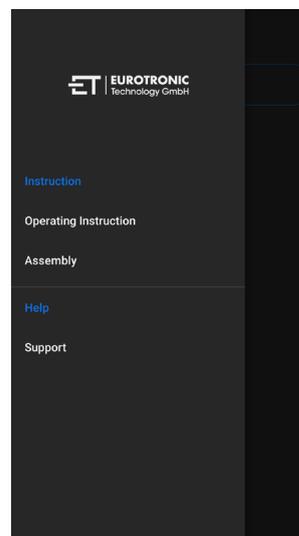


Create a new room or select the room. You can create up to 12 rooms.

Press and hold to edit/ rename the already created room.

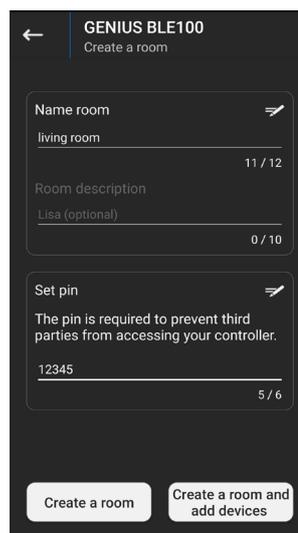

Name your room and determine a PIN.

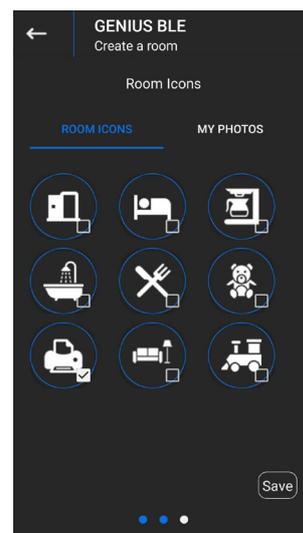

In the next step you can choose an icon for your room.

NOTE: If you want to use several devices, put the devices into operation one after the other in order to be able to make an unambiguous assignment of the devices.



8.1 DEVICES (APP)

GENIUS BLE 100



Once a room is created, your smartphone searches for devices in your environment.

With the symbol of the bin you can delete your Genius BLE 100.

The battery symbol shows the battery status of your Genius BLE 100.


The bluetooth-sign shows whether there is a bluetooth connection between your smartphone and Genius BLE 100.

In the menu bar you can switch between the menu items: temperature, heating profile, holiday and setting.

NOTE: The device takes the date and time of your smartphone.

8.2 TEMPERATURE (APP)

You can set your comfort temperature under the menu item „Temperature“.

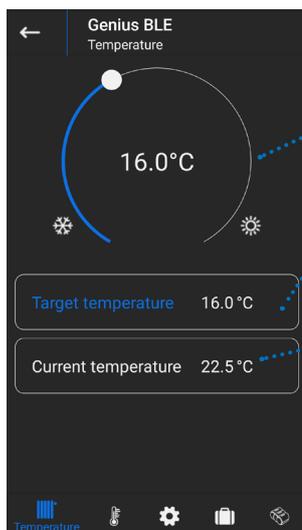

With the setting wheel you can set your temperatures.

Determine the temperature with which the heating is to be carried out. To do this, select the „Comfort temperature“ button and set the temperature using the setting wheel.


The current temperature shows which temperature is currently measured by Genius BLE 100.

NOTE: When the batteries are changed, the target temperature is set to 16°.

8.3 HEATING PROFILE (APP)

GENIUS BLE 100


In the menu item „Heating profile“ you can create individual heating profiles.

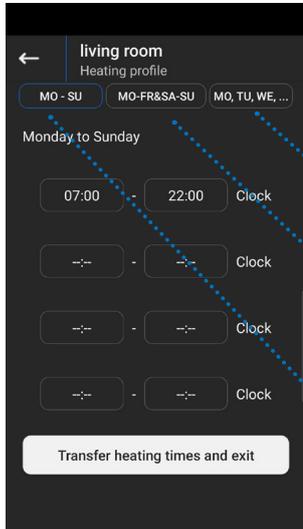

Here you can create a heating profile for the **each day**.

Here you can create different heating profiles for the **weekdays** and **weekends**.

Here you can create an individual heating profile for the **whole week**.

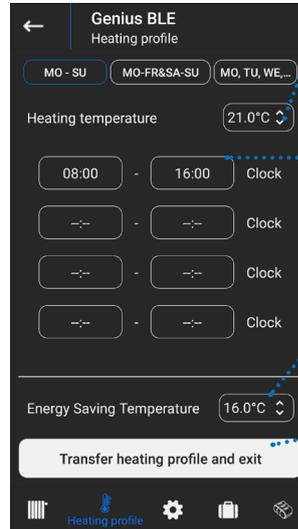

Determine the heating temperature with which the heating is to be carried out during the heating periods

Determine the heating periods during which the comfort temperature should be active.

Determine how far the temperature should be lowered during the saving times.

Here you can transmit your settings.


NOTE:

Make sure that the **distance** between the energy-saving controller and the mobile device is **not exceeded** when entering new data. The communication distance may be shortened by the construction of the building or other obstacles.

After entering new heating times, confirm with the button „Transmit heating times“ that the old data will be overwritten.

8.4 HOLIDAY FUNCTION (APP)

The menu item „Holiday“ allows you to create a holiday profile for the time of your absence.

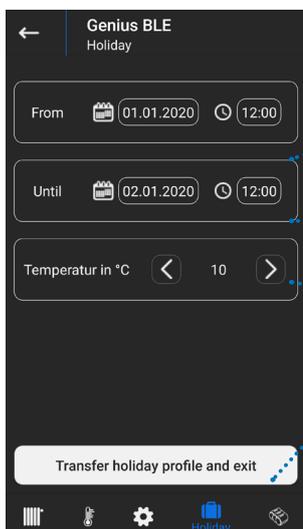

Select the time of your departure.

Select the time of your return.


Determine the room temperature for the duration of your absence.

After you have created your holiday profile, you can transmit your data.

8.5 SETTINGS (APP)

GENIUS BLE 100

Under the menu item „Setting“ you can set the window-open-detection and activate the key lock.

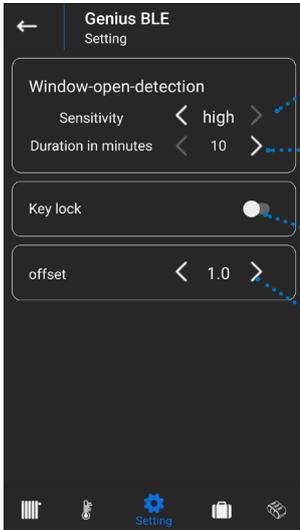

Select the sensitivity of the temperature setting (high, medium, low).

Set the desired period of time for which the valve is to remain closed.


By activating the child lock, manual operation on the controller is blocked. Refer to paragraph 9 for how to unlock the key lock manually.

If the perceived temperature deviates from the set temperature, a temperature adjustment from -5° to +5° is possible.

8.6 SUPPORT (APP)

Back to the overview.

Leave the checkmark ticked so that we can identify your problem more quickly.

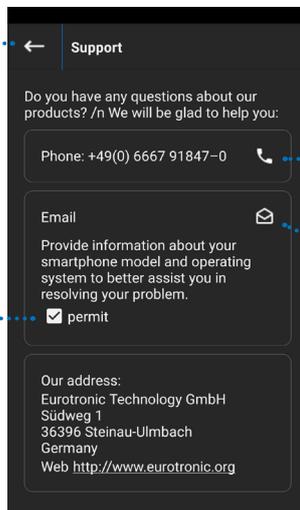

If you have any questions, please do not hesitate to contact us by telephone.

If you have any questions, you can send us an e-mail.

9. FURTHER FUNCTIONS

GENIUS BLE 100

Window-open-detection: The GENIUS BLE100 automatically closes the heating valve to save energy if you open a window and the temperature thereby drops significantly. If window-open detection is active, the window-open detection LED  lights up. The LED lights up until the set time has elapsed and the thermostat returns to normal mode.

Key lock: Please select the menu item Key lock in the menu. To do this, use **PLUS/MINUS** to navigate through the menu until the Key lock LED  lights up. Now confirm with **OK/SET**. Manual operation on the controller is now disabled. To unlock the key lock, press and hold the MENU and **OK/SET** buttons simultaneously for about 10 seconds.

NOTE:

While the key lock is active, the LED next to the key lock icon  lights up when an attempt is made to make changes to the thermostat.

When the key lock is unlocked, the Key Lock LED  turns on and off briefly. The current temperature is then displayed via the illuminated LEDs.

When the batteries are changed, the key lock is deactivated.



Anti-freeze and anti-scale function: The anti-freeze and anti-scale functions are automatically active.

Anti-freeze function: If the temperature drops below 8°C, GENIUS BLE 100 opens the valve until the temperature rises above 8°C again. This prevents the radiators from freezing.

Anti-scale function: To prevent the radiator valves from scaling, GENIUS BLE 100 regularly carries out a scaling protection run.

Resetting: If you wish to reset the radiator controller to the factory settings, press and hold the **PLUS/MINUS** buttons simultaneously for at least 10 seconds. A running light is indicated by the LEDs. After successful reset the LED for Assembly/Disassembly  starts flashing.

The procedure is now the same as for initial commissioning. Now proceed as for the initial commissioning.

10. CLEANING AND STORAGE

RISK OF DAMAGE! Improper handling of the thermostat can lead to damage.

- Do not immerse the thermostat in water or other liquids.
- Do not use aggressive cleaning agents, brushes with metal or nylon bristles or sharp or metallic cleaning objects such as knives, hard spatulas and the like. These can damage the surface.
- Clean the thermostat with a soft, dry cloth. Do not exert pressure on the display.



Switch off the device and remove the batteries if you will not be using the device for a long time. Store the device in a dry, dust-free place.

11. ERROR MESSAGES AND HELP

GENIUS BLE 100

Error	Cause	Solution
<p>The LED for battery flashes continuously.</p> 	<p>Battery low</p>	<p>Insert new batteries.</p>
<p>Radiator does not warm up.</p>	<p>Boiler water temperature OK? Valve does not open after the summer heating break - is it scaled?</p>	<p>Correct boiler water temperature, remove GENIUS BLE 100. Move the valve tappet back and forth several times by hand/tool.</p>
<p>Radiator does not get cold.</p>	<p>Valve does not close completely. The closing point of your valve seal may have shifted.</p>	<p>Perform new adaptation (see „Adaptation“) Move the valve tappet several times by hand - adaptation may not be possible because the valve may have scaled or the seal no longer fulfils its function.</p>
<p>Thrust piece falls out.</p> 	<p>An endless thread can cause the thrust piece located on the underside to fall out if the controller has not been applied to the valve.</p>	<p>Insert thrust piece. Press the OK-button or perform adaptation of the device by removing and reinserting the batteries. The endless thread now turns and tightens the thrust piece again. Attach to radiator and perform adaptation again.</p>
<p>The LED for Assembly/Dis-assembly flashes.</p> 	<p>Assembly error, no adaptation possible</p> <ul style="list-style-type: none">▪ GENIUS BLE 100 is not mounted on the radiator▪ Valve stroke too short▪ no valve movement possible	<p>Mount the device correctly on the radiator. If required, use a suitable adapter from the included accessories or other adapters from our web shop at www.eurotronic.org.</p>

12. TECHNICAL SPECIFICATIONS

GENIUS BLE 100

Name of device	GENIUS BLE 100
EAN	4260012711271
Article Number	700071
Supply Voltage	2 x 1,5V LR6/Mignon/AA
Connection	M30 x 1,5mm
Method of operation	Type 1
Dimensions (w x h x d)	56 x 68 x 89 mm
Weight	149,7 g (incl. batteries)
Degree of protection	IP20
Degree of pollution	2

Technical modifications are subject to change. All descriptions for compatibility are without engagement.

13. SUPPORT AND CONTACT

For technical support for the Eurotronic products, please contact Eurotronic via e-mail or telephone:

Customer Service: **Eurotronic Technology GmbH**

Südweg 1
36396 Steinau-Ulmbach
Germany

telephone: +49 (0) 6667 91847-0

e-mail: info@eurotronic.org

14. ENVIRONMENTAL INFORMATION

GENIUS BLE 100

From the date of transposition of the European Directives 2012/19/EU into national law, the following shall apply:

Electrical and electronic devices as well as batteries must not be disposed of with household waste.



The consumer is legally obliged to return electrical and electronic equipment and batteries at the end of their service life to the public collection points set up for this purpose or to the point of sale. Details are regulated by the respective national law.

Batteries and rechargeable batteries must not be disposed of with household waste!



As a consumer, you are legally obliged to dispose of all batteries and rechargeable batteries, no matter whether they contain harmful substances* or not, at a collection point in your municipality/city district or in the respective stores, so that they can be disposed of in an environmentally friendly manner.

*labelled with: Cd = cadmium, Hg = mercury, Pb = lead

Dispose of Packaging:



Dispose of the packaging sorted by type. Add paperboard and cardboard to the waste paper, foils to the recyclables collection. Dispose of the packaging sorted by type. Add paperboard and cardboard to the waste paper, foils to the recyclables collection.

The symbols on the product, the instruction manual or the packaging refer to these regulations. By recycling, material utilisation or other forms of utilisation of old devices/batteries, you make an important contribution to the protection of our environment.

Konformitätserklärung:



Eurotronic Technology GmbH hereby declares that the GENIUS LED 100 radiator thermostat complies with all applicable European Economic Area regulations of Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following Internet address: <https://eurotronic.org/service/downloads>.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Eurotronic Technology GmbH is under license. Other trademarks and trade names are those of their respective owners.

The Apple Logo, iPad und iPhone are brands of Apple Inc., which are registered in the USA and other countries. App Store is a service brand of of Apple Inc. Google Play, Android and other brands are brands of Google Inc. Google Play, Android und andere Marken sind Marken von Google Inc.

15. WARRANTY

The two-year warranty begins on the day of purchase. Please keep the receipt as evidence of purchase in the future. During the guarantee period, defective radiator thermostats may be sent to the service address below. Please ensure sufficient postage is paid.

A new or repaired device will then be sent to you free of charge. There is no new warranty period starting when repairing or replacing the device. Please note that we only grant warranty on the function of the device. We will not grant warranty for the interaction between the thermostat and the bottom part of the valve. The technical data is only valid for the use of the following valves: Heimeier, Junkers Landys+Gyr, MNG, Honeywell Braukmann (measure of thread M30x1,5), Oventrop (M30x1,5) Danfoss RA, RAV und RAVL.

Please see the combinations of the devices on our website (www.eurotronic.org/service/faq/)

Following expiry of the warranty, you may still send the defective device to the address below for repairs. Please ensure sufficient postage is paid. Repairs carried out after the guarantee are subject to a charge. Your legal rights are not affected by this guarantee.



Eurotronic Technology GmbH
Südweg 1 | 36396 Steinau-Ulmbach | Germany
www.eurotronic.org

07/2020