

# CZW-250 Energy-Saving Controller with WiFi

## OPERATING INSTRUCTIONS



# LEGAL NOTICE

## Operating Instructions CZW-250 Energy-Saving Controller with WiFi

### Manufacturer

EUROtronic Technology GmbH  
Südweg 1  
36396 Steinau-Ulmbach  
Germany  
[www.eurotronic.org](http://www.eurotronic.org)

Operating Instructions  
Status 2024.12  
Version 1.2 / EN

### Publisher

Ingenieurbüro FORMAT GmbH  
Ebertstraße 80  
26382 Wilhelmshaven  
Germany  
[www.format-docu.de](http://www.format-docu.de)

### Legal Information

All brand names and trademarks mentioned in this document and, where applicable, protected by third-party rights, are subject without restriction to the provisions of the applicable trademark law and the ownership rights of the respective registered owners. Comply with all local and regional laws and regulations as well as the safety regulations referred to in this document.

### Copyright Notice

The contents of this document are protected by copyright.  
The disclosure, transfer and any other distribution of the contents of this document to third parties, the making of copies, transcripts and other reproductions as well as utilisation and any other use are prohibited - even in part - without the prior, express and written consent of the author.

© 2024 All rights reserved.

# CONTENTS



These operating instructions will guide you through the commissioning and use of your CZW-250 and answer all essential questions. Read these operating instructions carefully before using your CZW-250. Hand over all documents when passing it on to third parties.

1	Safety Information	4
1.1	Depiction of Warnings	4
1.2	Warnings	5
2	Scope of Delivery	8
3	Overview	9
3.1	Proper Use	9
4	Controls and Display Elements	10
5	Putting into Operation	11
5.1	Installing Eurotronic Smart Living 2.0 App	11
5.2	Creating User Account	12
5.3	Adding New Device	13
5.4	Selecting Network	14
5.5	Inserting Batteries	15
5.6	Teaching in CZW-250	16
5.7	Installing on Radiator	19
5.8	Adapter Overview	21
5.9	Adapting CZW-250	23
5.10	Naming and Assigning CZW-250	24
6	Removing CZW-250	26
7	Configuring App	27
7.1	Setting Temperature in a Room	28
7.2	Device Settings	30
7.3	Heating Profile	31
7.4	Holiday	35
7.5	Customer Service	39
8	Operating Modes & Functions	41
8.1	Basic Operating Modes	41
8.2	Additional functions	42
8.3	Resetting to Factory Settings	44
9	Troubleshooting	45
10	Cleaning and Storage	46
11	Appendix	47
11.1	Technical Data	47
11.2	Support and Contact	47
11.3	Disposal	48
11.4	Personal Data	48
11.5	Simplified Declaration of Conformity	48
11.6	Warranty Notice	49
11.7	Manufacturer	49

# 1 SAFETY INFORMATION

In addition to the safety information in these operating instructions, all other available sources must also be observed.

The areas of use defined in the written explanations of the **proper use** must be observed.

## 1.1 DEPICTION OF WARNINGS

The warnings used in these operating instructions have the following meaning:



### WARNING!

There is a risk of serious injury or even fatal injury if the warning sign containing this signal word is ignored.

→ Probability of occurrence: possible



### CAUTION!

Moderate to minor personal injury may occur if warnings with this signal word are disregarded.

→ Probability of occurrence: possible



### IMPORTANT!

Material damage can occur if warnings with this signal word are disregarded.

→ Probability of occurrence: possible



### INFORMATION

Contains additional information.

## 1.2 WARNINGS

When operating your CZW-250 and its components, hazards may occur that can be avoided by observing the following warnings.



### WARNING!

#### Risk of fatal injury and accidents to infants and children!

There is a risk of suffocation from the device and packaging material.

- Never leave children unsupervised with the device or the packaging material. Children underestimate the risks involved. Always keep children away from the device and packaging material.
- Keep batteries out of reach of children. Should a battery be swallowed, seek medical attention immediately.



### CAUTION!

#### Risk of injury through exploding or leaking batteries!

Improper handling of batteries can lead to an explosion.

- Only use batteries of the type specified.
- Never attempt to charge non-rechargeable batteries.
- Switch the device off and remove the batteries if the device will not be used for a longer period.
- Do not heat batteries and do not throw them into open flames or water.
- Do not place batteries in direct sunlight.
- Protect batteries from excessive heat.
- Do not short-circuit batteries.
- Never dismantle batteries.
- Do not use new and used batteries together.
- When inserting the batteries, observe the correct polarity (+/-).
- Before inserting the batteries, clean the batteries and the contacts in the device.
- Avoid contact of battery acid with skin, eyes and mucous membranes.
- In case of contact with battery acid, immediately rinse the affected areas with clean water and consult a doctor.
- Remove dead batteries from the device.
- Remove batteries from the device before disposing of the device.
- Improper handling of batteries can have adverse effects on your health and the environment. Batteries can contain toxic and environmentally harmful heavy metals (Cd = cadmium, Hg = mercury, Pb = lead). Therefore, separate disposal and recycling of used batteries is essential for environmental and health reasons.



**CAUTION!**

**Burns caused by hot radiator valve!**

Touching can cause burns to the hand.

- Allow the radiator to cool down before installing, disassembling or clearing faults on the device!
- Wear protective gloves



**CAUTION!**

**Risk of injury due to malfunction!**

Malfunctions can lead to injuries.

- Never carry out repairs to the device yourself.
- Do not open the device.
- Do not short-circuit the connection terminals of the device.
- Do not carry out any modifications or conversions on your device.
- Do not use the device if it is damaged.
- In the event of an error, contact Customer Service.



**IMPORTANT!**

**Material damage and malfunction possible!**

The device can be used by children from the age of 8 and persons with restricted physical, sensory or mental capabilities or a lack of experience and knowledge when they are supervised or if they have been instructed on safe use of the device and understand the potential dangers involved.

- Children must not be allowed to play with the device.
- Cleaning and user maintenance must not be carried out by children without supervision.



### IMPORTANT!

#### **Material damage and malfunction possible!**

Environmental influences can affect the functions of the device.

- Keep the device away from direct sunlight.
- Only use the device in a dry, dust-free environment.
- Use only original accessories.
- Do not operate the device if it is damaged.



### IMPORTANT!

#### **Material damage and malfunction possible!**

Damaged components and/or malfunctions prevent the device from working properly.

- If material damage and/or malfunctions occur, contact the Customer Service of Eurotronic Technology GmbH.

## 2 SCOPE OF DELIVERY

Check the scope of delivery for completeness as well as visual and technical defects before putting your CZW-250 into operation.

- 1× CZW-250 Energy-Saving Controller
- 1× Quick Guide
- 3× Adapter (Danfoss RA/RAV/RAVL)
- 1× Screw for adapter
- 2× AA/LR6 batteries
- 1× Reset button (only for older models)



### IMPORTANT!

#### Material damage and malfunction possible!


Damaged components and/or malfunctions prevent the device from working properly.

➔ If material damage and/or malfunctions occur, contact the Customer Service of Eurotronic Technology GmbH.



### INFORMATION

The following drawings are for the purpose of illustration and are not necessarily to scale. EUROtronic Technology GmbH reserves the right to change the design or dimensions without prior notice.

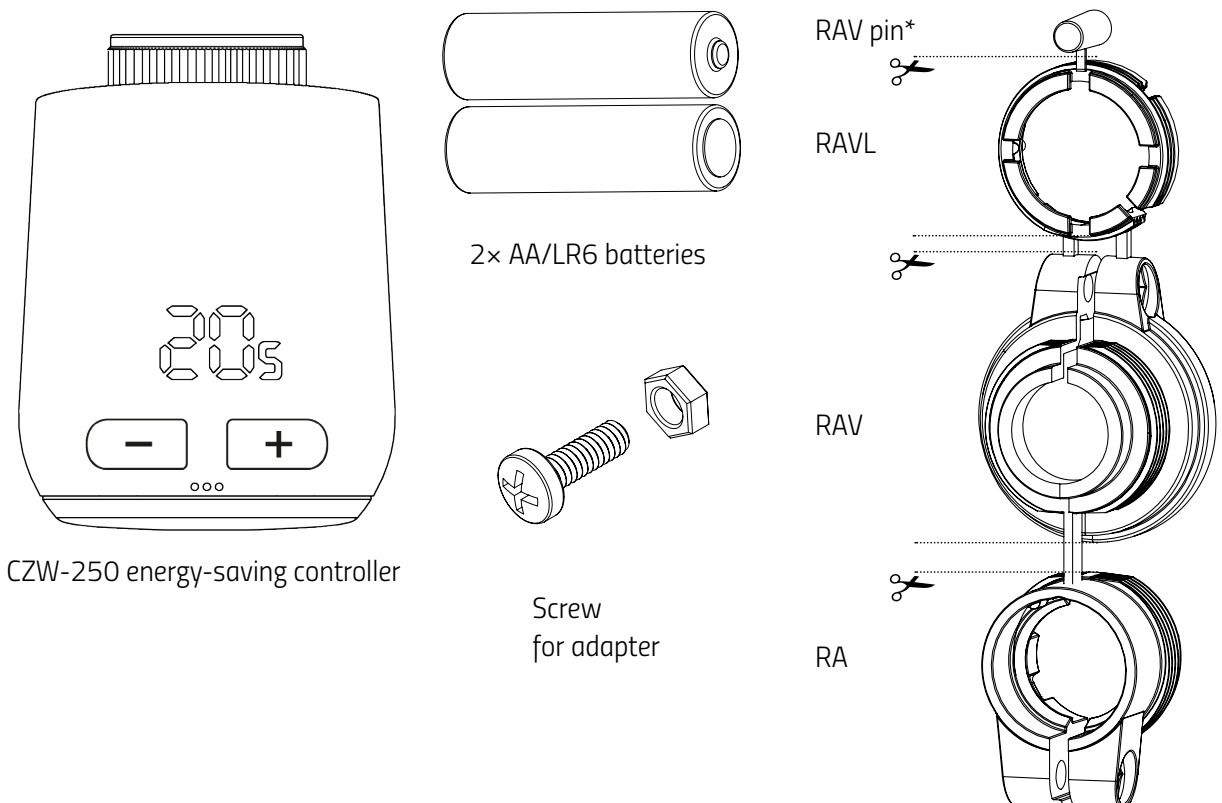

\*When using the RAV adapter, the RAV pin is required to extend the valve plunger.



## 3 OVERVIEW

Thank you for choosing a product from EUROtronic Technology GmbH. Your CZW-250 is an energy-saving controller for radiators equipped with the WiFi radio standard with modern, simple operation. It automatically regulates your room temperature according to your specifications and is configurable, either directly on the controller or conveniently with a smartphone via your WiFi network.

Your CZW-250 helps you to effectively reduce your heating costs.

Development and production are 100% "Made in Germany", which guarantees premium quality and technology. These operating instructions will help you to get your CZW-250 up and running quickly and easily.

### 3.1 PROPER USE

Your CZW-250 is used to regulate a radiator valve. This makes it possible to regulate the room temperature time-controlled and via an app. Your CZW-250 moves a radiator valve to control the flow of heat into the radiator. Your CZW-250 can be installed on all common radiator valves. Only use your CZW-250 indoors.

Any use other than that described in these operating instructions is not in accordance with the proper use and will result in the warranty being voided and exclusion of liability. It is forbidden to complete any unauthorised modifications, conversions and repairs. Your CZW-250 is intended for private use only.



#### INFORMATION

The drawings in these instructions are for the purpose of illustration and are not necessarily to scale. Product designations and pictograms on screenshots may differ from the actual product.




● **Reduce heating costs**  
with energy-efficient control.




● **WiFi connection**  
Control and configure your  
CZW-250 via the 2.4 GHz WiFi network.


● **Easy assembly**  
without intervention in the heating water circuit.

# 4 CONTROLS AND DISPLAY ELEMENTS

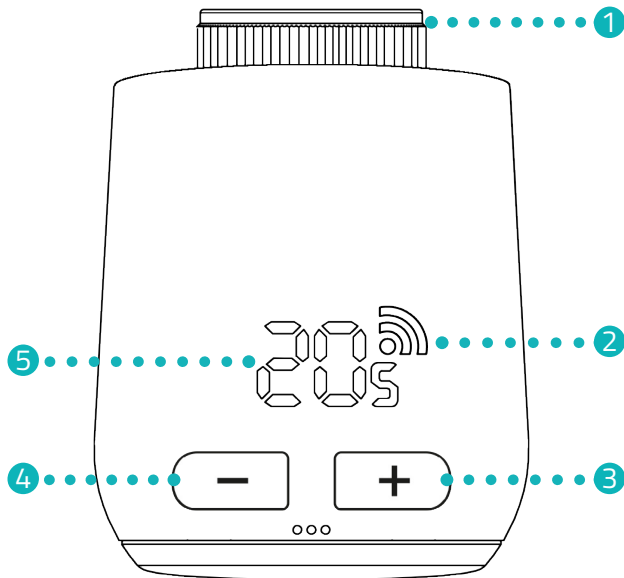The following section describes the controls and display elements of your CZW-250.



-  **Symbol lights up**  
Connected to server
-  **Symbol flashes**  
Connection to server is established
-  **Symbol off**  
No connection to WiFi network

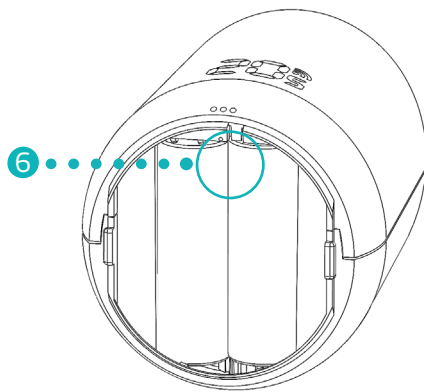

- 1 Union nut
- 2 Wireless symbol
- 3 + button (increase temperature)
- 4 - button (decrease temperature)
- 5 Temperature display
- 6 Reset button

## 5 PUTTING INTO OPERATION

The following section describes the procedure using the **Eurotronic Smart Living 2.0** app for the Android operating system (app version: 1.2). The procedure may differ for the iOS operating system.

Your CZW-250 is also compatible with Alexa voice control.

You can find more information in the **Alexa Guide** at: <https://eurotronic.org/service/downloads/alexa/>



### INFORMATION

The following illustrations show the app at the time of publication of these operating instructions. Newer versions of the app may differ in appearance and content. The illustrations in these instructions are for illustrative purposes only. Product designations and pictograms on screenshots may differ from the actual product.


### 5.1 INSTALLING EUROTRONIC SMART LIVING 2.0 APP

1. Download the **Eurotronic Smart Living 2.0** app from Google Play (Android) or the App Store (iOS).
2. Install the app on your smartphone.

#### System requirements:

Android from version 6.0

iOS from version 13

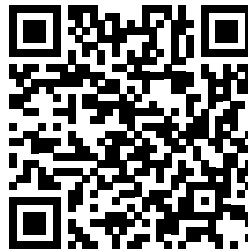


### INFORMATION


During the initial setup of the app, requests are made as to whether the app is granted authorisation to access functions of your smartphone. Allow access to use the full range of functions of your CZW-250.

## 5.2 CREATING USER ACCOUNT

You must create a user account to use the app:

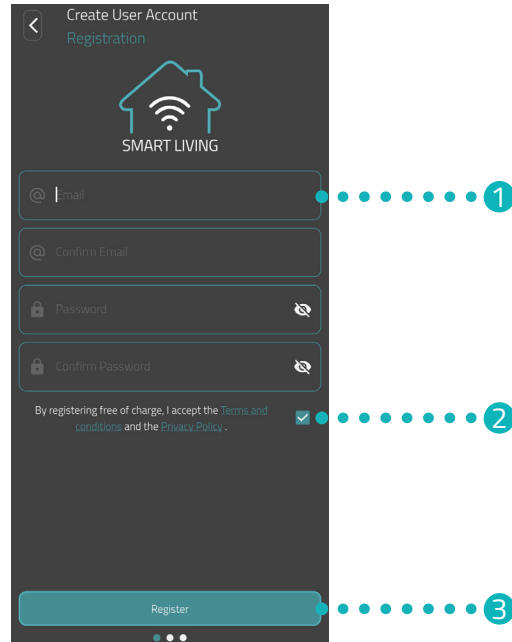

1. Create a user account. Enter your e-mail address and assign a password. Make sure your e-mail is valid. The validity of the e-mail address will not be checked.
2. Check the box to accept the general terms and conditions and data protection policy.
3. Tap the **Register** button.
  - ➔ You will receive an activation code by e-mail to verify your user account. Also check your spam folder.

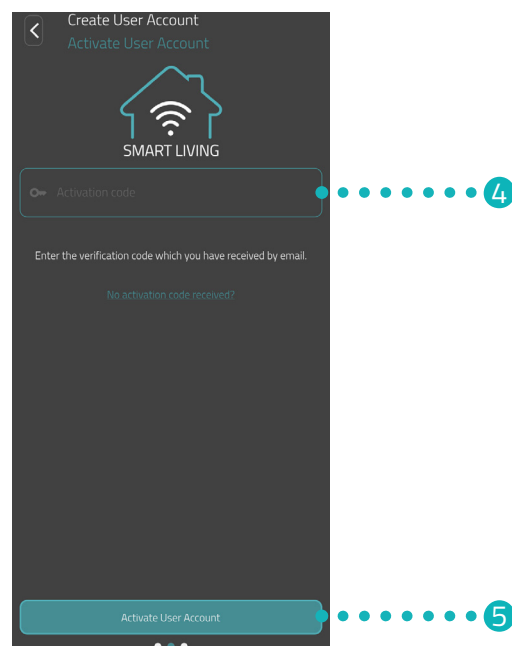


4. Enter the activation code in the **input field**.
5. Tap the **Activate User Account** button.
  - ➔ You have successfully created your user account.

## 5.3 ADDING NEW DEVICE



1. Tap the + button to add a new device.
2. Then follow the steps displayed in the setup wizard to set up your CZW-250 for initial operation.  
→ You have successfully added your CZW-250.

## 5.4 SELECTING NETWORK

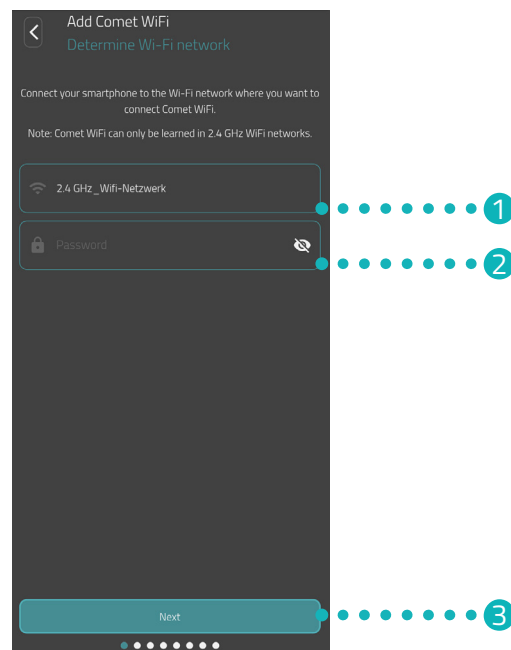

1. The WiFi network to which your smartphone is connected is automatically displayed. You can integrate your CZW-250 in another WiFi network if required.





### INFORMATION

For your WiFi to be displayed in the **My WiFi Network** field, the following requirements must be met:

- Your WiFi must transmit in the 2.4 GHz frequency range. If your router only supports the 5 GHz frequency range, operation of your CZW-250 is not possible. For more information, see the operating instructions for your router.
- The location detection (GPS) of your smartphone must be activated.
- The **Eurotronic Smart Living 2.0** app requires authorisation to access your location (GPS). Adjust this setting in your smartphone if necessary. For more information, see the operating instructions for your smartphone.


2. Enter your WiFi password in the input field. Make sure you spell your password correctly. The app will not check your WiFi's password. If the password is entered incorrectly, the setup process will still continue, but the connection to your CZW-250 cannot be established.
3. Tap the **Next** button.
  - ➔ You have successfully connected your CZW-250 to your WiFi network.

## 5.5 INSERTING BATTERIES

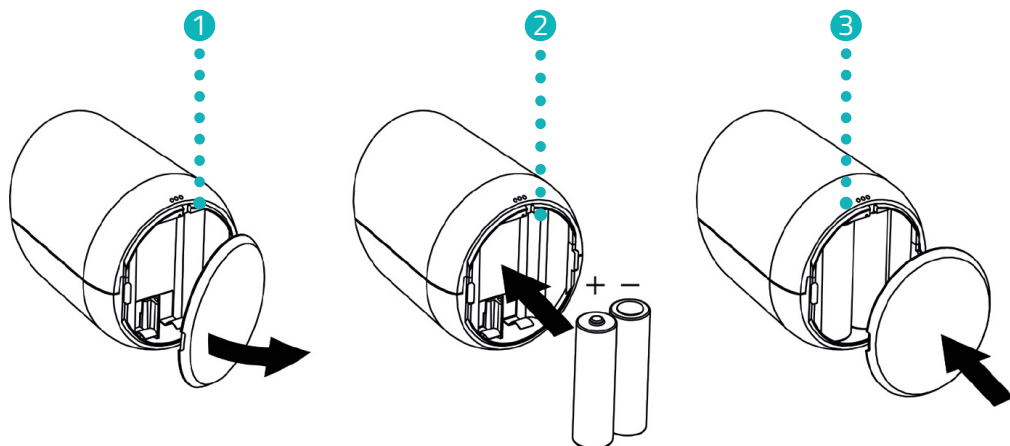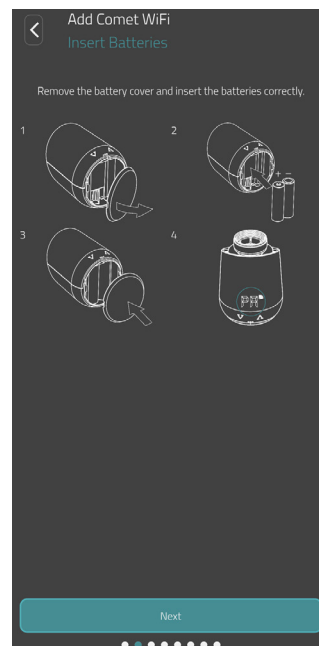


1. Open the battery compartment cover.
2. Insert the batteries provided as shown.  
**Pay attention to the correct polarity and do not use rechargeable batteries!**
3. Close the battery compartment cover. The battery compartment cover audibly clicks into place.  
→ You have successfully inserted the batteries.

## 5.6 TEACHING IN CZW-250

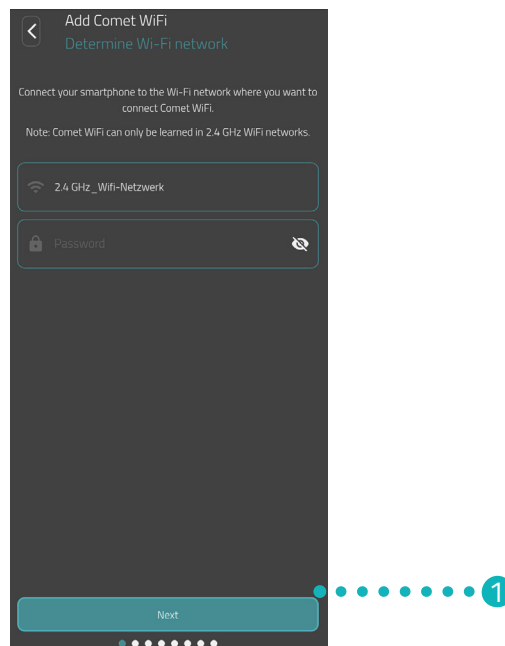


PA appears on the display of your CZW-250 and the wireless symbol flashes. Your CZW-250 is ready to connect to your WiFi network.

1. Tap the **Next** button.

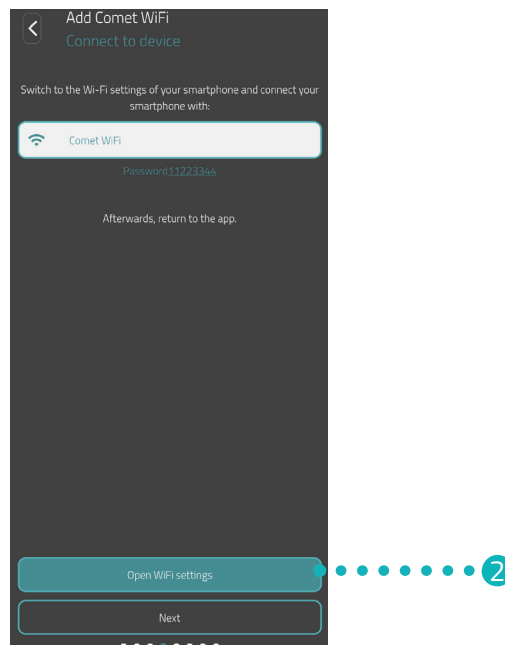

2. Tap the **Open WiFi Settings** button to switch to the WiFi settings of your smartphone.



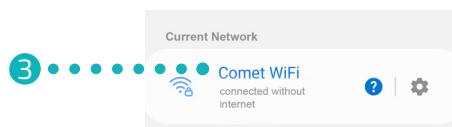


3. Select your CZW-250 in the WiFi settings of your smartphone. Depending on the software version, your CZW-250 is displayed in the WiFi settings with the designation "Comet WiFi" or "Eurotronic".
4. When prompted, enter the password displayed in the app (from factory 11223344) in the input field to connect to your CZW-250.
  - A loading animation appears on the display of your CZW-250.
  - Your CZW-250 is connected to your WiFi and the app. The process may take a moment.



### INFORMATION

During setup, you are briefly connected to the WiFi network of your CZW-250 and a message may be displayed informing you that you are not connected to the Internet. Confirm this message to stay connected to your CZW-250 and continue with the setup.

5. Switch back to the **Eurotronic Smart Living 2.0** app.

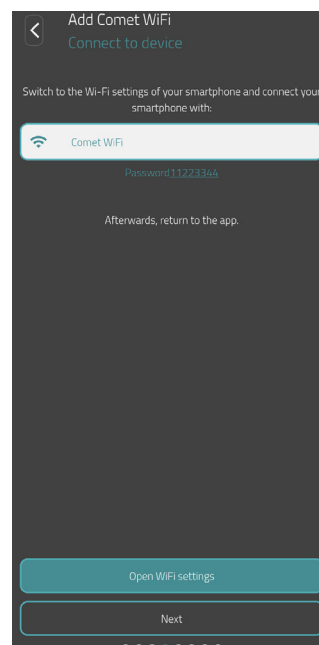


6. Tap the **Next** button.





### INFORMATION

If you are using a CZW-250 with an older software version, a software update will automatically be carried out after the setup.

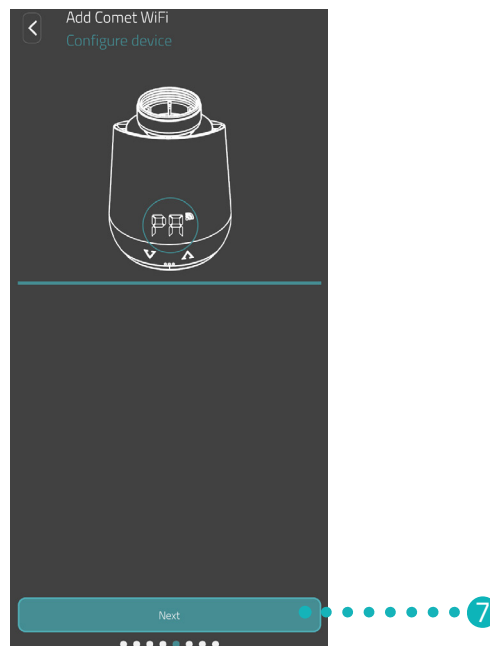

7. Tap the **Next** button.

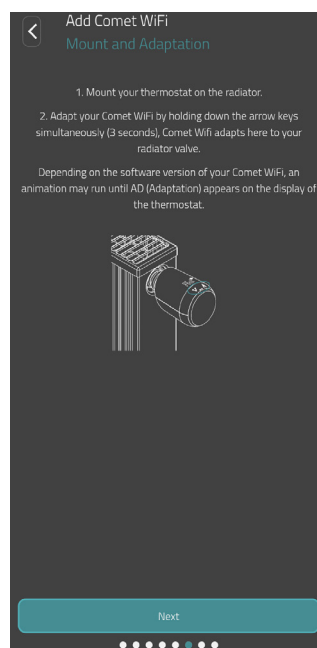

8. Now install your CZW-250 on your radiator (see  Section 5.7 Installing on radiator on Page 19) and tap the **Next** button.



### INFORMATION

If the setup is not completed, ensure the following points:

- Temporarily deactivate the mobile data of your smartphone.
- Activate the location detection (GPS) of your smartphone and allow the app to access it.

## 5.7 INSTALLING ON RADIATOR

Install your CZW-250 on the desired radiator when indicated by the app.

The CZW-250 can be installed on all known valve bodies (see adapter list at [www.eurotronic.org/service/faq](http://www.eurotronic.org/service/faq)).




### CAUTION!


#### Burns caused by hot radiator valve!

Touching can cause burns to the hand.


- ➔ Do not touch hot radiator valves!
- ➔ Allow the radiator to cool down before installing, disassembling or clearing faults on the device!

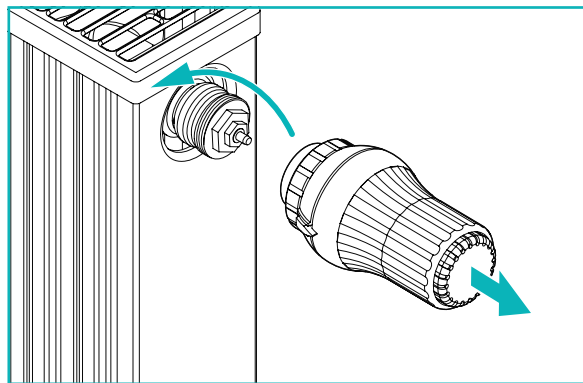


1. Open the current thermostatic head completely. Loosen the fastening and pull the thermostatic head off the radiator.

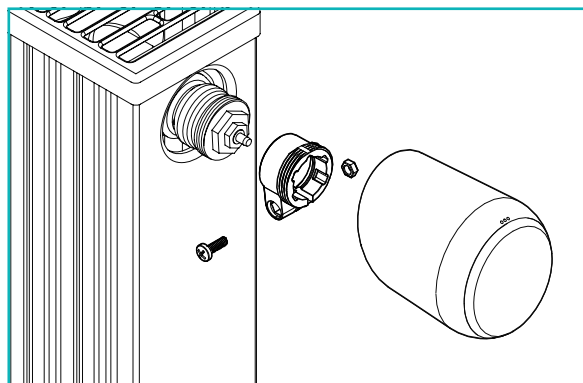

2. Optional: Select a suitable adapter from the scope of delivery. For additional information on the adapters, please see the  Section **5.8 Adapter overview on Page 21**.

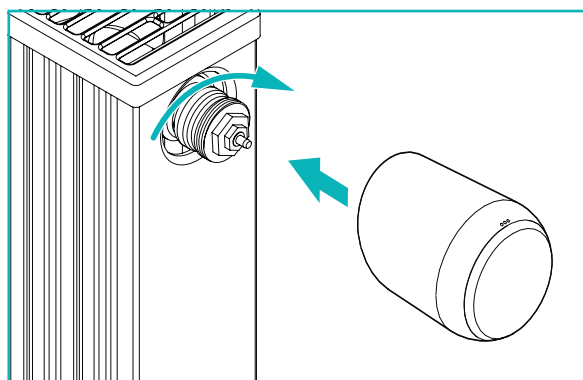

3. Position your CZW-250 on the radiator and turn the union nut clockwise.
  - ➔ You have successfully installed your CZW-250.
  - ➔ Following installation, start the adaptation, see  Section **5.9 Adapting CZW-250 on Page 23**.




#### INFORMATION

When installing/removing at a later date, please note that your CZW-250 must be in the adaptation mode. To do this, open the battery compartment cover and remove the batteries. Replace the batteries after approx. 10 sec. and close the battery compartment cover. Your CZW-250 restarts and is in the adaptation mode. **Ad** appears in the display.

## 5.8 ADAPTER OVERVIEW

The following overview contains information about the valves and the required adapters. The adapters for Danfoss RAV, Danfoss RA and Danfoss RAVL are included with your CZW-250. When using the Danfoss RAV adapter, the RAV pin must be inserted on the valve plunger.

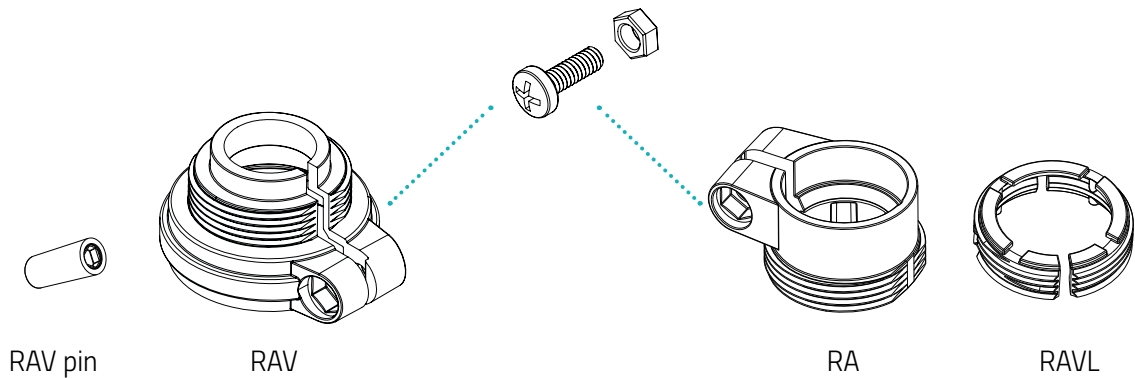


Valve	Thread dimension	Adapter
Heimeier	M30 x 1.5 mm	Not required
Junkers Landys+Gyr	M30 x 1.5 mm	Not required
MNG	M30 x 1.5 mm	Not required
Honeywell	M30 x 1.5 mm	Not required
Braukmann	M30 x 1.5 mm	Not required
Herz	M28 x 1.5 mm	Required; not in scope of delivery
Comap	M28 x 1.5 mm	Required; not in scope of delivery
Vaillant	30.5 mm	Required; not in scope of delivery
Oventrop	M30 x 1.0 mm	Required; not in scope of delivery
Meges	M38 x 1.5 mm	Required; not in scope of delivery
Ondal	M38 x 1.5 mm	Required; not in scope of delivery
Giacomini	22.6 mm	Required; not in scope of delivery
Rosswainer	M33 x 2.0 mm	Required; not in scope of delivery
Markaryd	M28 x 1.0 mm	Required; not in scope of delivery
Ista	M32 x 1.0 mm	Required; not in scope of delivery
Vama	M28 x 1.0 mm	Required; not in scope of delivery
Pettinaroli	M28 x 1.5 mm	Required; not in scope of delivery
T+A	M28 x 1.5 mm	Required; not in scope of delivery
Gampper 1/2/6	M20	Required; not in scope of delivery
Danfoss RA/RAV/RAVL	25.5/30.5/30 mm	Included in scope of delivery



### INFORMATION

Remove the connecting pieces of the plastic adapters completely (see illustration) before using one of the adapters included! For Danfoss RAV and Danfoss RA, use the screw and nut provided.

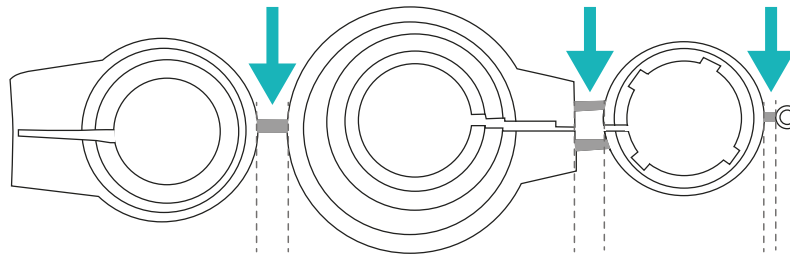

### CAUTION!

#### **Danger of being cut!**

The adapters supplied and the plunger extension are connected by plastic bars. Fractures may be sharp-edged.

→ Be careful not to cut your fingers during installation!



### CAUTION!

#### **Danger of becoming trapped between the adapter halves!**

Carelessness when using adapters can lead to injuries.


→ Take care not to become trapped between the adapter halves during installation!

You can purchase further metal adapters for a fee from our partners. You will find an overview of the metal adapters and corresponding ordering options under the following link:

<https://eurotronic.org/produkte/zubehoer/metalladapter/>

## 5.9 ADAPTING CZW-250

After successful assembly, your CZW-250 can start adapting. The prerequisite is that **Ad** is shown in the display of your CZW-250.

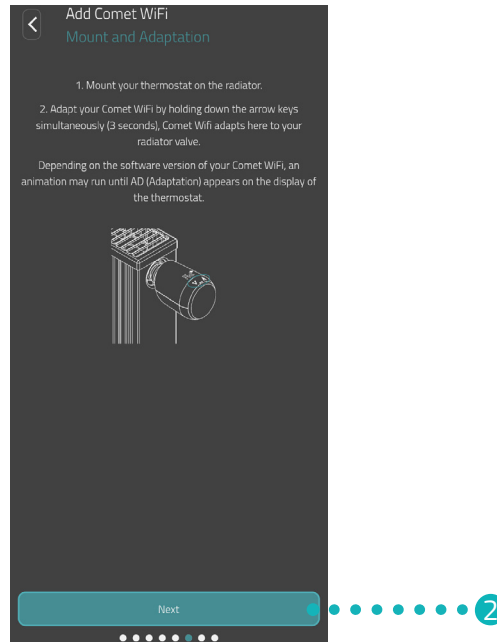

1. To start the adaptation, press and hold the **+** button and the **-** button on your CZW-250 simultaneously for approx. 3 seconds.
  - ➔ When adapting, your CZW-250 adapts to the stroke of your lower valve section. For this purpose, the valve is opened and closed several times to detect the respective end points. The process may take a moment. After successful adaptation, your CZW-250 switches to normal operation.
2. Tap the **Next** button in the app.

If a problem occurs with your CZW-250, a new adaptation is necessary. Carry out the following steps for this purpose:

1. Open the battery compartment cover.
2. Press the **reset button**.
  - ➔ A timer in the display runs up to **10**. Then **PA** is displayed and the WiFi symbol flashes.
3. Alternatively, remove the batteries and wait for 10 seconds. Then reinsert the batteries.
4. Close the battery compartment cover.
  - ➔ Your CZW-250 restarts and is then in the adaptation mode. **Ad** appears in the display.




### INFORMATION

Your CZW-250 must be re-adapted after each battery change.

## 5.10 NAMING AND ASSIGNING CZW-250

After successful installation and adaptation, you can give your CZW-250 a name in the app and assign your CZW-250 to a room.

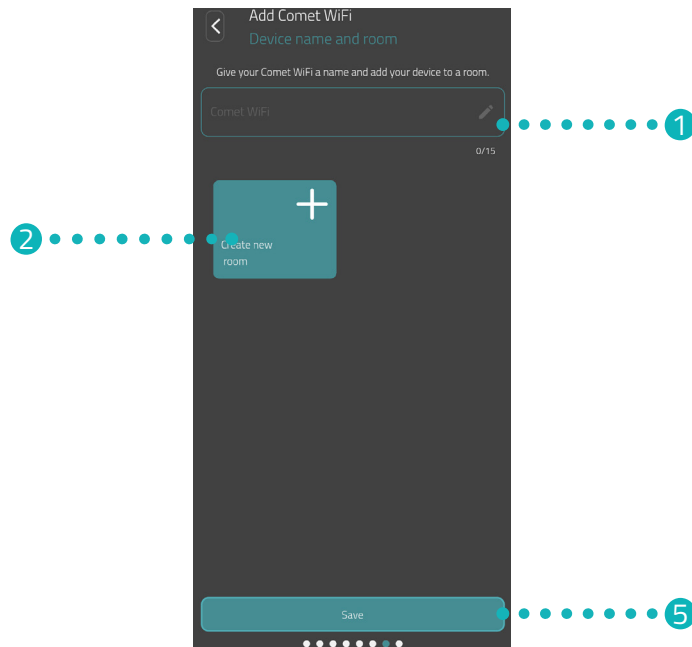

1. Enter a designation for your CZW-250 in the input field.
2. Tap the **Create new room** button to create a room and assign your CZW-250 to this room.



### INFORMATION

When using several CZW-250, you can also assign the devices to existing rooms. It is not necessary to create a separate room for each CZW-250.






3. Select a symbol and a name for the room.
4. Tap the **Next** button.
5. Tap the **Save** button.
  - You have successfully named your CZW-250 and assigned it to a room.
  - Your CZW-250 is now fully set up and ready to use.




#### INFORMATION

If problems occur during the saving process, your smartphone may not be connected to the correct WiFi. In the WiFi settings, make sure that your smartphone is connected to the correct WiFi (2.4 GHz). Then repeat the saving process.

## 6 REMOVING CZW-250

The prerequisite for removing your CZW-250 is that your CZW-250 is in the adaptation mode, see  Section **5.9 Adapting CZW-250 on Page 23**.

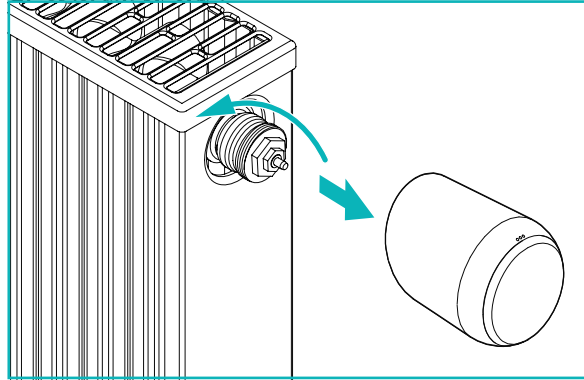

### CAUTION!

#### Burns caused by hot radiator valve!

Touching can cause burns to the hand.


- ➔ Do not touch hot radiator valves!
- ➔ Allow the radiator to cool down before installing, disassembling or clearing faults on the device!

1. Turn the union nut anti-clockwise.
2. Pull your CZW-250 off the valve (see illustration).
  - ➔ You have removed your CZW-250.

## 7 CONFIGURING APP

After successful installation and initial start-up of your CZW-250, you can make further settings in the **Eurotronic Smart Living 2.0** app.

From the start screen (My Home) you have access to the menu bar and all the rooms that have been set up.

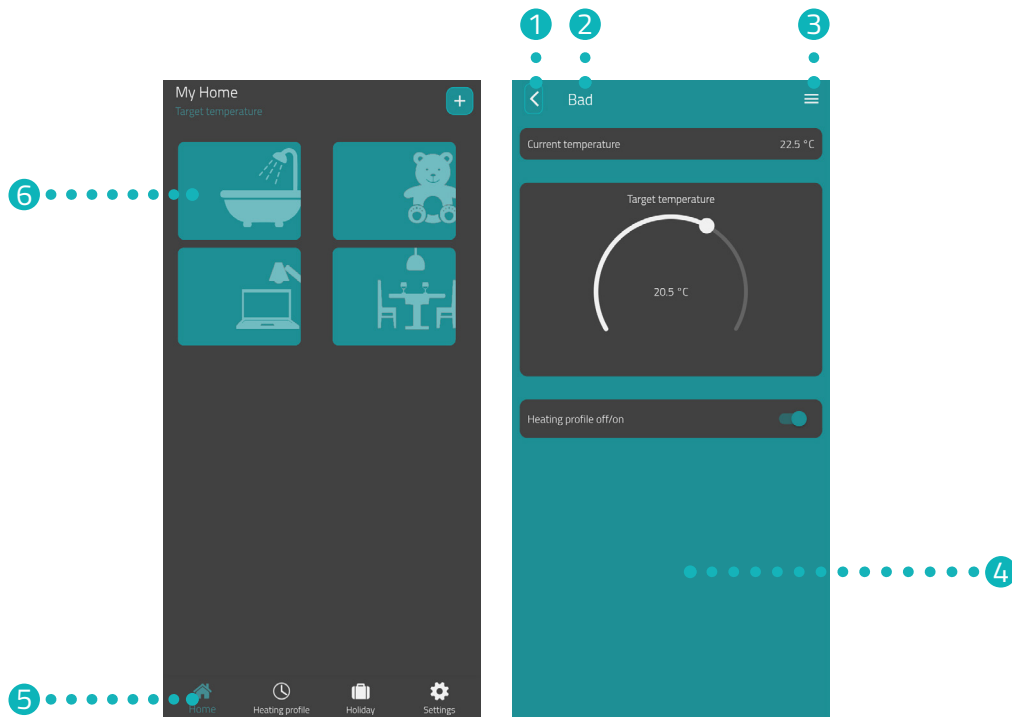

- |                 |   |
|-----------------|---|
| ① Back button   | ④ Current display (e.g. room, device, etc.) |
| ② Selected room | ⑤ Menu bar                                  |
| ③ Room menu     | ⑥ Selection of rooms                        |


Via the selection of rooms, you have access to the associated CZW-250 devices.

The following functions are available in the menu bar:

- Home screen (My Home)
- Heating plans, see Section **7.3 Heating profile on Page 31**
- Holiday, see Section **7.4 Holiday on Page 35**
- Settings, see Section **7.5 Customer service on Page 39**

## 7.1 SETTING TEMPERATURE IN A ROOM


You can set the temperature for each room individually. After selecting a room, set the desired temperature for the room or radiator.

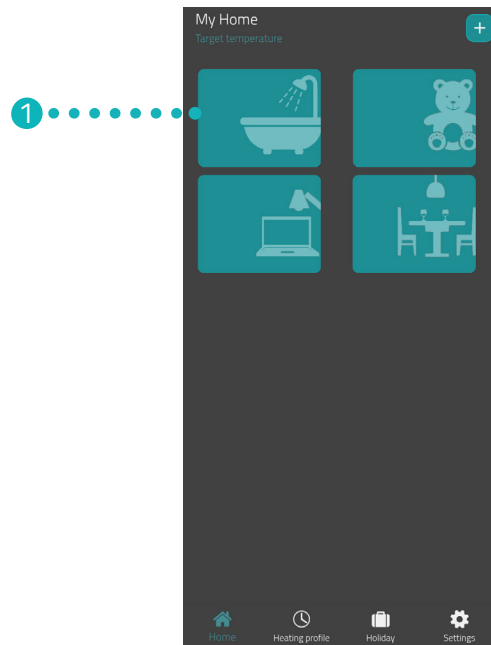

1. Tap on the desired room (e.g. bathroom).  
→ The current room temperature and the set temperature are displayed.


2. Make additional settings:




- ① The menu displays all CZW-250s that are assigned to the current room. You can make additional settings for the selected CZW-250, see  Section **7.2 Device settings on Page 30**.
- ② The **Current temperature** area displays the current temperature in the room.
- ③ Adjust the temperature individually with the setting wheel in the **Set Temperature** area. The set temperature is transmitted to your CZW-250 as soon as you are on the same WiFi.

- ④ **Heating profile off:**  
The stored heating profile is not active.  
**Heating profile on:**  
The stored heating profile is active. However, you can still make changes to the temperature. The temperature set manually is maintained until the next switching point. Your CZW-250 then switches to the set heating programme.

## 7.2 DEVICE SETTINGS


In the menu of a room (see  Section 7.1 **Setting temperature in a room on Page 28.**) you have access to all CZW-250s assigned to the room. You have access to additional settings and information about the selected CZW-250:

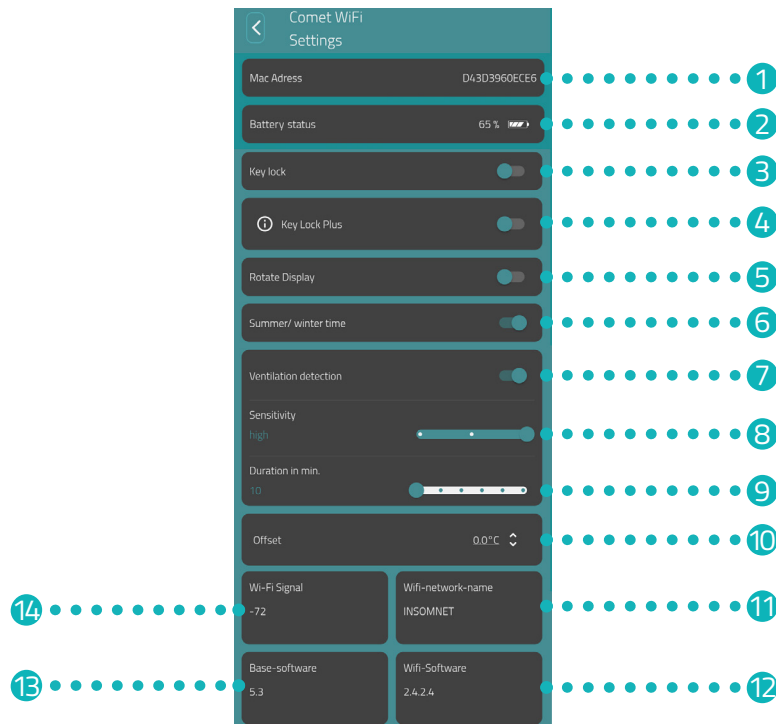

- |  |  |
|--|--|
| 1 Mac address.   | 8 Sensitivity of ventilation detection   |
| 2 Current battery level  | 9 Duration for which the heating valve is closed when ventilation detection is activated |
| 3 Activate/deactivate Key lock                                       | 10 Carry out temperature adjustment  |
| 4 Activate/deactivate Key Lock Plus                                  | 11 Currently connected WiFi network.   |
| 5 Rotate display 180°  | 12 Version of the current WiFi software.   |
| 6 Summer/winter time is changed automatically (activated at factory) | 13 Version of current controller software.   |
| 7 Activate/deactivate ventilation detection.                         | 14 Signal strength of connected WiFi.  |




### INFORMATION


Not all the functions shown are activated by default. For additional information on the functions listed above, see  Section 8.2 **Additional functions on Page 42.**

## 7.3 HEATING PROFILE


In the **Heating profile** menu, you set heating blocks with heating times for different days. You can set the temperature individually for each heating time.

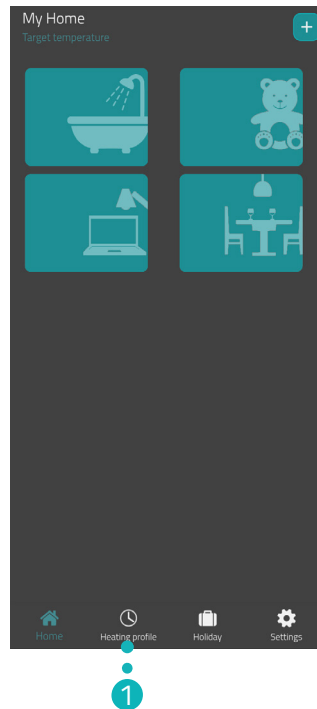


1. Tap the **Heating profile** button.  
→ The overview of the heating profiles is displayed.

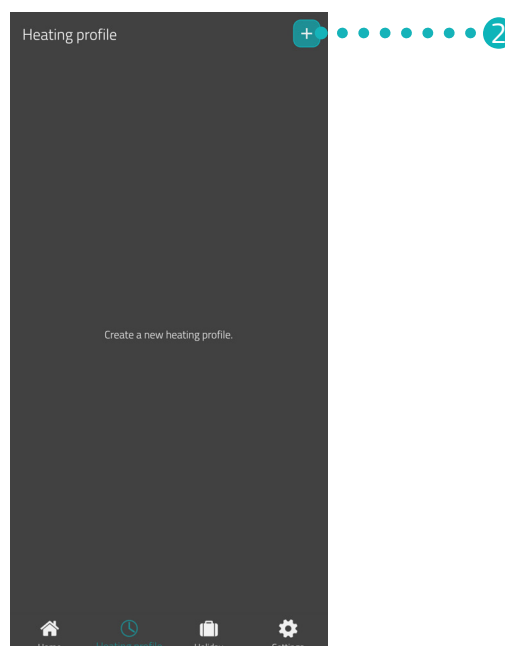

2. Tap the **+** button to create a new heating profile.  
→ The overview of the available rooms is displayed.

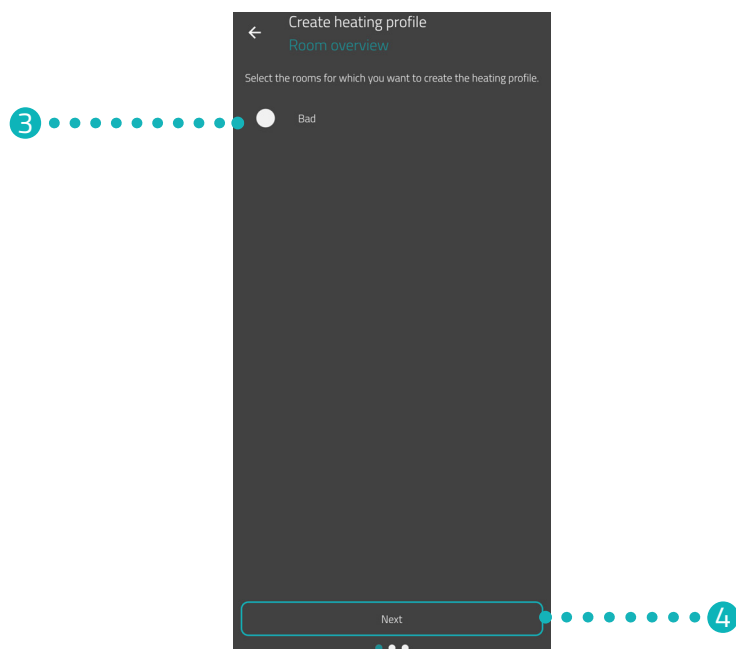


3. Tap on one or more rooms for which the heating profile is to apply.
4. Tap the **Next** button.

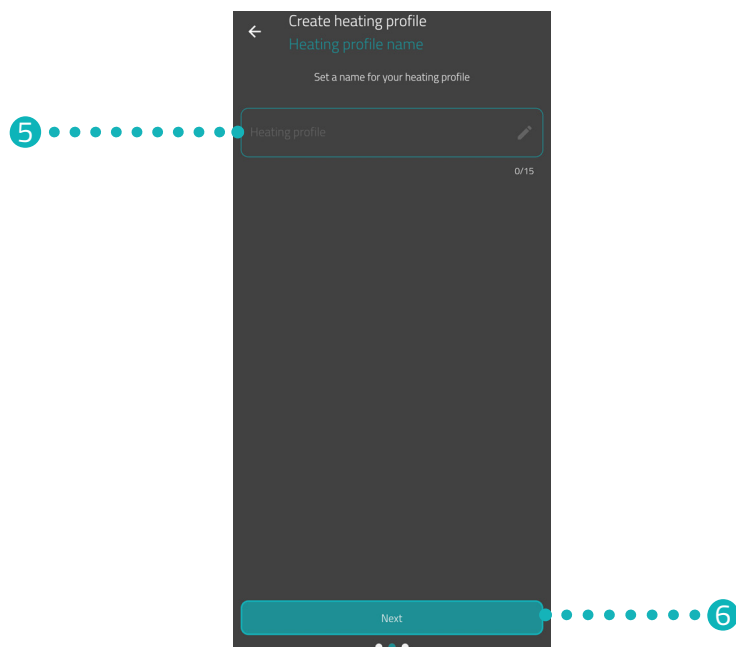

5. Enter a designation for the heating profile in the input field.
6. Tap the **Next** button.





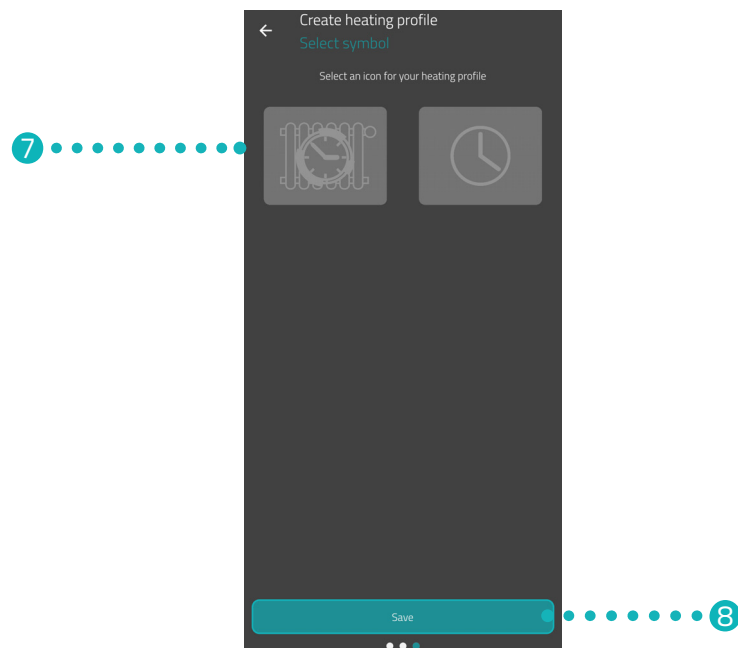

7. Select a symbol for the heating profile.
8. Tap the **Save** button.
  - ➔ You have successfully created the heating profile.



9. Tap the **heating profile** to set the heating times:

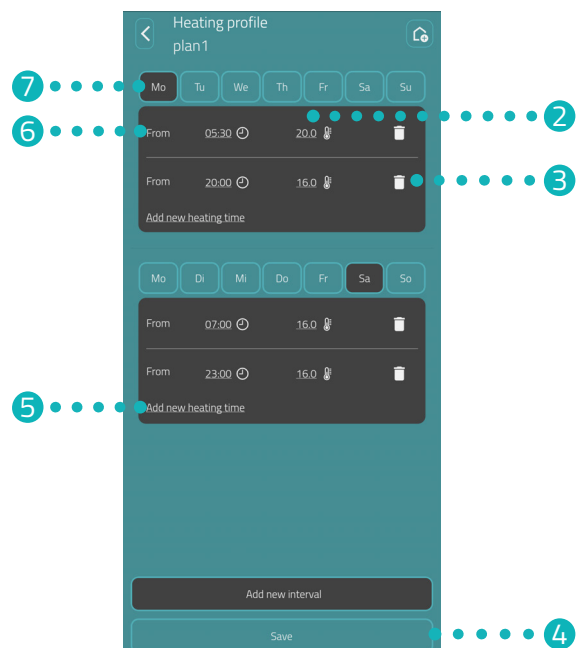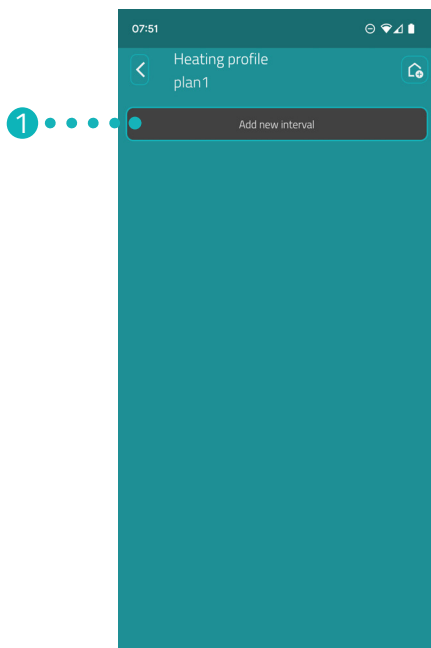

- 1 Add a new heating block.
- 2 Set the target temperature for the selected switching point.
- 3 Delete the selected heating time.
- 4 Save the settings.
- 5 Add a new heating time for the heating block.
- 6 Set the starting time of the selected heating time.
- 7 Select the period of the current heating block.




### INFORMATION


Note that the settings are only transferred to the corresponding CZW-250s and are consequently activated by tapping the **Save** button.

## 7.4 HOLIDAY


Set a holiday profile for a period of absence in the **Holiday** menu. You can set the temperature individually for each switching point.

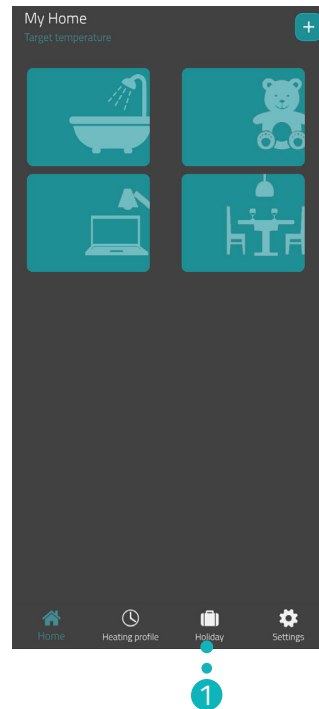


1. Tap the **Holiday** button.
2. Tap the **+** button to create a new holiday profile.  
→ The overview of the available rooms is displayed.

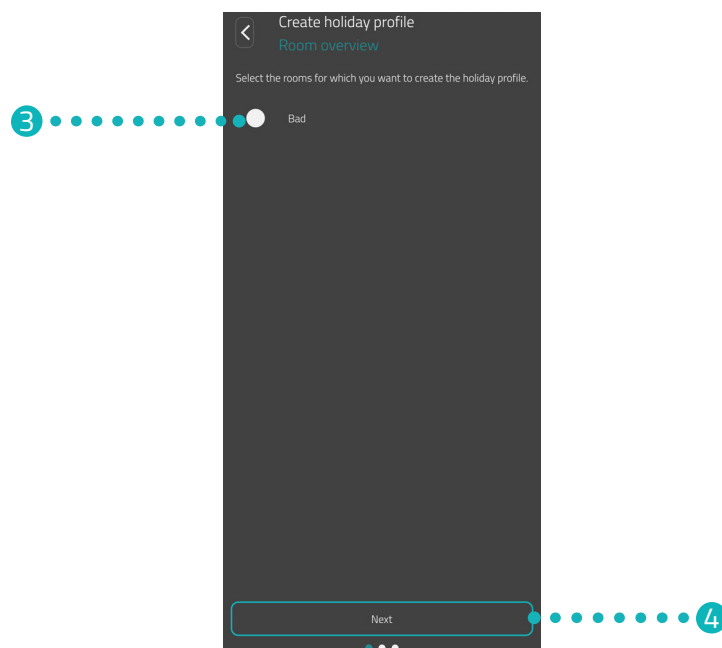


3. Tap on one or more rooms for which the holiday profile is to apply.
4. Tap the **Next** button.

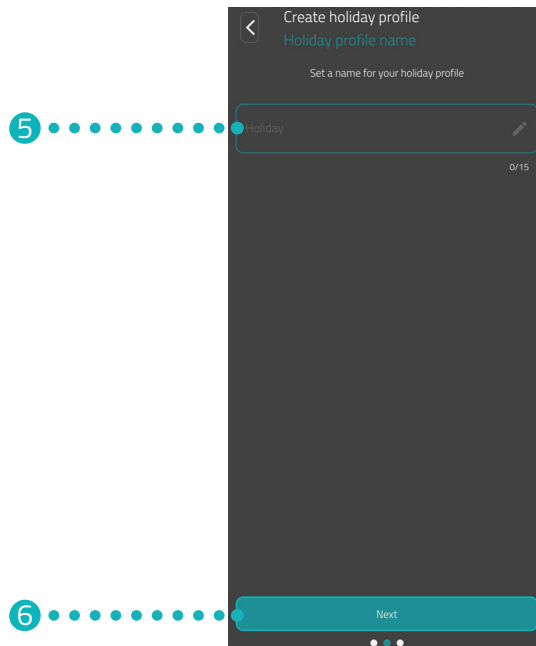


- 5. Enter a designation for the holiday profile in the input field.
- 6. Tap the **Next** button.

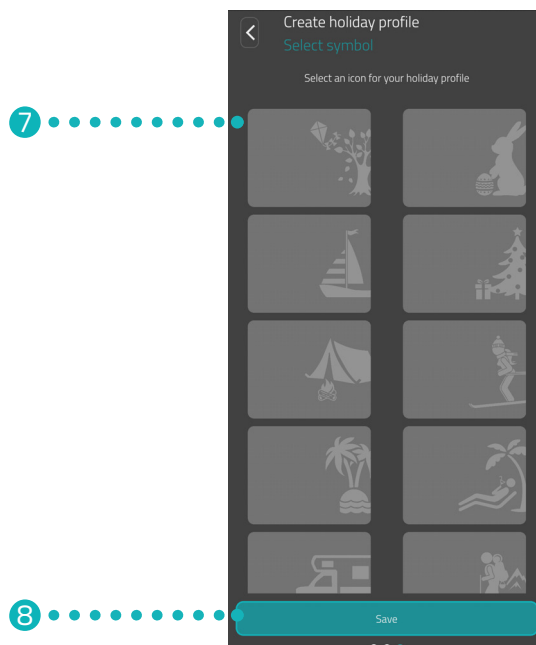

- 7. Select a symbol for the holiday profile.
- 8. Tap the **Save** button.

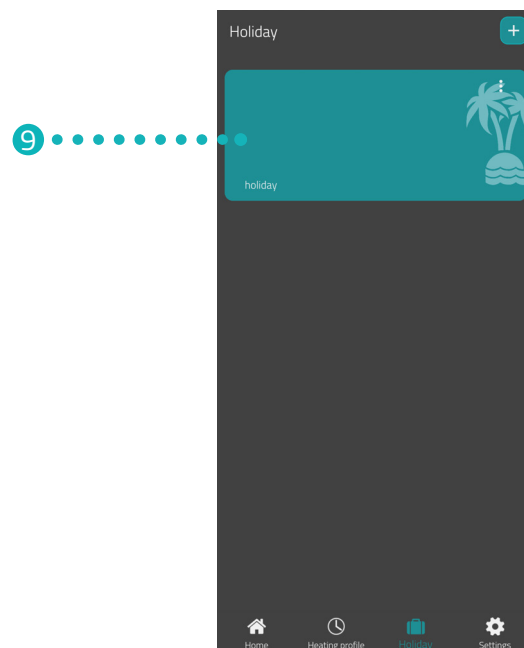

9. Tap **Holiday** to set the heating times:  
→ You have created the heating profile for a period of absence.

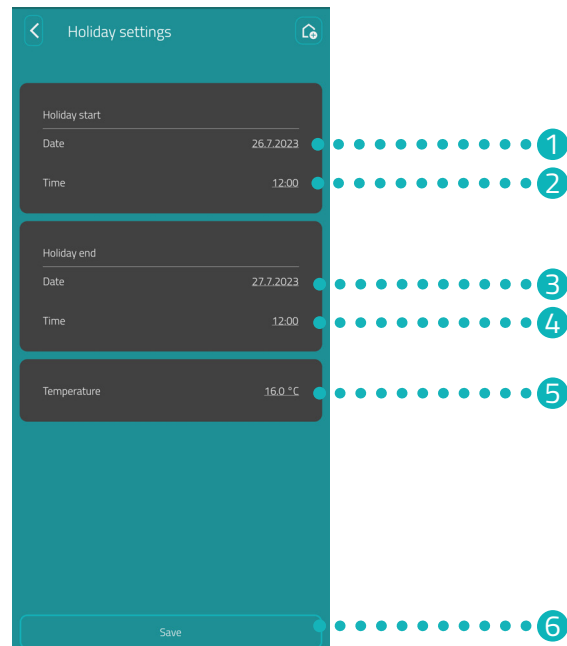

- 1 Set the **Date** for the start of the period of absence.
- 2 Set the **Time** for the beginning of the period of absence.
- 3 Set the **Date** for the end of the period of absence.
- 4 Set the **Time** for the end of the period of absence.
- 5 Set the **Temperature** for the period of absence.
- 6 Save the settings.




### INFORMATION


Note that the settings are only transferred to the corresponding CZW-250s and are consequently activated by tapping the **Save** button.

## 7.5 CUSTOMER SERVICE


The following section describes the Customer Service area in the **Eurotronic Smart Living 2.0** app.

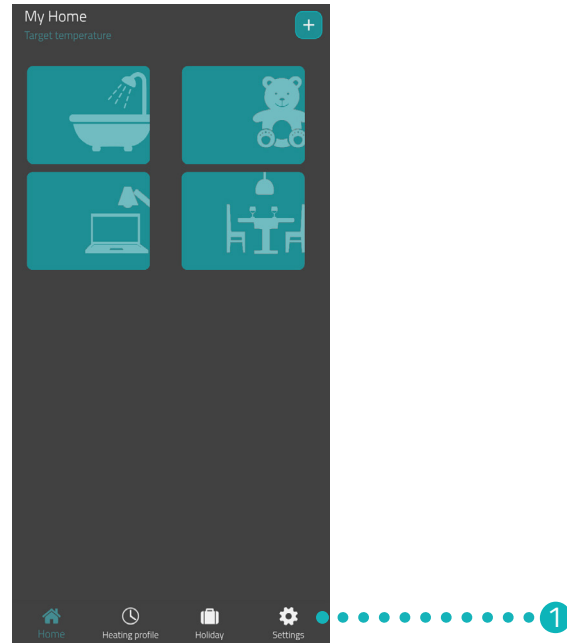

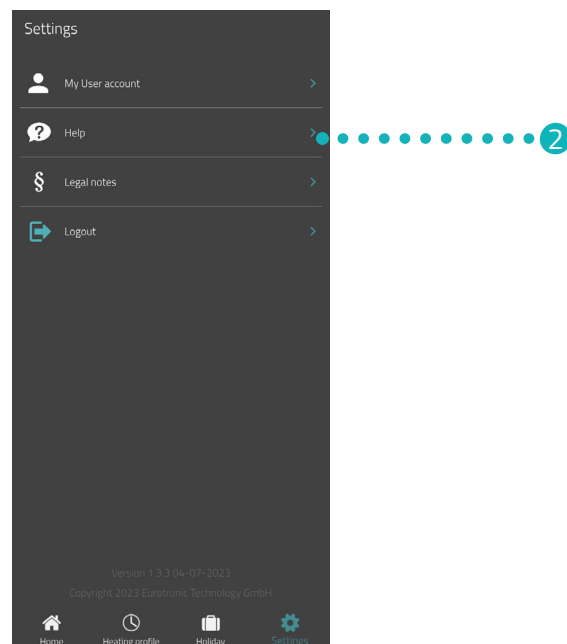

1. Tap the **Settings** button on the My Home screen.

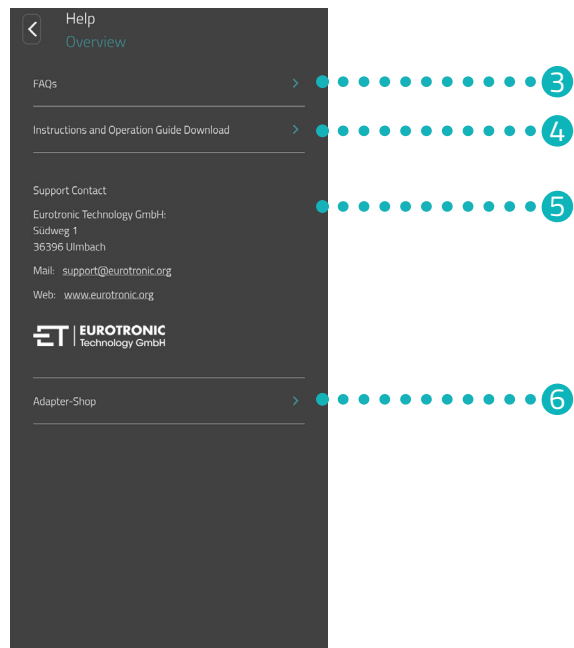

2. Tap the **Help** button.



3. Tap the **FAQs** button to open the "Frequently Asked Questions" website.
4. Tap the **Instructions and Operating Guide Download** button to download the operating instructions for the **Eurotronic Smart Living 2.0** app.
5. This area displays the contact information (see  Section **11.2 Support and contact on Page 47**).
6. Tap the **Adapter Shop** button to open the website with more adapters (see  section **5.8 Adapter overview on Page 21**).



## 8 OPERATING MODES & FUNCTIONS

The following section describes the operating modes and other functions of your CZW-250.

### 8.1 BASIC OPERATING MODES


#### HEATING PROFILE (ACTIVATED)

If you activate the heating profile in the **Eurotronic Smart Living 2.0** app, your CZW-250 regulates the temperature according to the set heating profile. You can still make changes to the temperature (in the **Eurotronic Smart Living 2.0** app or on your CZW-250) at any time. The manually set temperature remains unchanged until the next heating time. Your CZW-250 then switches back to the set heating profile.

#### HEATING PROFILE (DEACTIVATED)


If you deactivate the heating profile in the **Eurotronic Smart Living 2.0** app, your CZW-250 adjusts to the manually set temperature. The temperatures are not changed at the set heating time.

#### HOLIDAY

You can set a freely selectable temperature for the time you are absent. After the set time has elapsed, the heating profile set by you runs again automatically. To set the holiday, select the **Holiday** menu item in the **Eurotronic Smart Living 2.0** app, see  Section **7.4 Holiday on Page 35**.

If you press a button on the CZW-250 during an active holiday profile, **Ho** appears in the display. When a button is pressed again, the set temperature is shown on the display, thereby deactivating the holiday profile.

#### HEATING PROFILE


You can easily and conveniently set your heating profile in the **Eurotronic Smart Living 2.0** app under the menu item **Heating profile**, see  Section **7.3 Heating profile on Page 31**.

#### MANUAL OPERATION

It is possible to change the temperature manually using the touch buttons on your CZW-250. If a heating profile is activated, this manually set temperature remains set until the next heating time. Your CZW-250 then switches back to the set heating profile.

## 8.2 ADDITIONAL FUNCTIONS

### VENTILATION DETECTION


If the temperature drops sharply due to an open window, your CZW-250 automatically closes the heating valve to save energy. You can activate and deactivate the **window-open detection** function in the **Eurotronic Smart Living 2.0** app. Adjust the settings if necessary, see  Section **7.2 Device settings on Page 30**.




#### INFORMATION

Depending on the installation situation of your CZW-250 and the set sensitivity, the open window may not be detected. A tilted window may not be detected if the temperature drop is not sufficient. Adjust the settings if necessary, see  Section **7.2 Device settings on Page 30**.


### OFFSET (TEMPERATURE ADJUSTMENT)

If the temperature felt differs from the set temperature, you can perform a temperature adjustment. Adjust the settings if necessary, see  Section **7.2 Device settings on Page 30**.

### ALIGN DISPLAY

Depending on the positioning of your radiator valve, it may be necessary to turn the display of your CZW-250 by 180°. Adjust the settings if necessary, see  Section **7.2 Device settings on Page 30**.

### KEY LOCK / KEY LOCK PLUS

Activate the key lock in the **Eurotronic Smart Living** app to lock your CZW-250 for other people, see  Section **7.2 Device settings on Page 30**.

Alternatively, activate the key lock directly on your CZW-250:

1. Press and hold the **+ button** and the **- button** simultaneously for a few seconds. A corresponding animation is shown on the display.
2. To deactivate, press and hold the **+ button** and the **- button** simultaneously for a few seconds. Wait until the animation on the display disappears.



#### INFORMATION

The Key Lock Plus can only be deactivated using the app and not using the buttons on your CZW-250.

## FROST AND LIME PROTECTION


The frost protection and limescale protection functions are automatically active.


**Frost protection:** If the temperature drops below 8° C, the display shows --. In this case, your CZW-250 opens the valve until the temperature rises above 8° C again. This prevents the radiators from freezing.

**Lime protection:** To prevent the radiator valves from calcifying, your CZW-250 performs a limescale protection run every Friday at 11:00 a.m.

## 8.3 RESETTING TO FACTORY SETTINGS

If problems occur, it may be helpful to reset your CZW-250 to the factory settings.

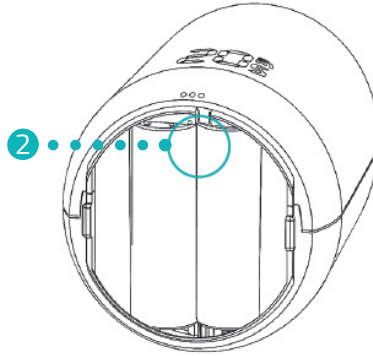

1. Open the battery compartment cover.
2. Press and hold the **Reset button** in the battery compartment for 10 seconds.
  - A timer in the display runs up to **10**. Then **PA** is displayed and the WiFi symbol flashes.
  - You have reset your CZW-250 to the factory settings. Perform the initial setup again, see  Section **5.3 Adding new device on Page 13**.




### INFORMATION

For CZW-250 devices with software version 4.9, only press the **reset button** briefly to reset your CZW-250 to the factory settings.

## 9 TROUBLESHOOTING

Problems can also occur with your CZW-250. The following information will help you eliminate errors.

Problem	Cause	Remedy
The app does not show WiFi in the "My WiFi network" area.	<ul style="list-style-type: none"> <li>Your router does not operate in the 2.4 GHz frequency range.</li> <li>The location detection (GPS) of your smartphone is deactivated or the app does not have access to it.</li> </ul>	<ul style="list-style-type: none"> <li>Check whether your WiFi operates in the 2.4 GHz frequency range, as your CZW-250 can only be integrated into a 2.4 GHz WiFi network. For more information, see the operating instructions for your router.</li> <li>Activate the location detection (GPS) of your smartphone.</li> <li>The app requires authorisation to access your location (GPS). Adjust this setting in your smartphone if necessary. For additional information, see the operating instructions for your smartphone.</li> </ul>
C1	<ul style="list-style-type: none"> <li>You have not entered the WiFi password correctly in the app.</li> <li>The WiFi signal strength is too weak.</li> </ul>	<ul style="list-style-type: none"> <li>Delete your CZW-250 from the app and add it again, see  Section <b>5.3 Adding new device on Page 13</b>.</li> <li>Improve the WiFi signal strength of your home network by taking appropriate measures.</li> </ul>
C2	<ul style="list-style-type: none"> <li>The WiFi password has been changed.</li> <li>Interruption of the existing wireless connection.</li> <li>Set-up WiFi connection was temporarily interrupted (e.g. power failure, network cable)</li> </ul>	<ul style="list-style-type: none"> <li>Your CZW-250 must be reconnected to the WiFi network (by entering the new WiFi password).</li> <li>Improve the WiFi signal strength of your home network by taking appropriate measures.</li> <li>For example, check your power supply and network cable.</li> </ul>
C3	WiFi connection without Internet access.	Check your Internet connection.
Batteries need to be changed frequently.	Check your WiFi signal strength.	Check your Internet connection.
<b>E1-E3</b>	<b>Pressing any button clears the error indication in the display and the adaptation restarts.</b>	
E1	No adaptation possible. Your CZW-250 is not installed on the radiator.	Install your CZW-250 correctly on the radiator.
E2	Valve stroke too short or battery power too low.	Open and close the valve plunger by hand several times or insert new batteries.
E3	No valve movement possible.	Press any button to acknowledge. Make sure that the valve plunger can move freely.
bt	The batteries are weak.	Change the batteries.

# 10 CLEANING AND STORAGE

Switch off your CZW-250 and remove the batteries if you will not be using your CZW-250 for a longer period of time. Store your CZW-250 in a dry, dust-free place.



## IMPORTANT!

### Material damage possible!

Improper handling of the device can lead to damage.

- ➔ Do not immerse the device in water or other liquids.
- ➔ Do not use any brushes with metal or nylon bristles or sharp or metallic cleaning tools such as knives, hard spatulas and such. They can damage the surfaces.
- ➔ Clean the device with a soft, dry, lint-free cloth.
- ➔ Do not use cleaning agents or solvents.

# 11 APPENDIX

The following section contains information on technical data, customer service and other legal information.

## 11.1 TECHNICAL DATA

Designation	CZW-250
Supply voltage	2× AA/LR6 batteries
Threaded connection	M30 × 1.5 mm
Method of operation	Type 1
Dimensions	62 × 68 × 83 mm
Weight	161 g (incl. batteries)
Protection class	IP 20
Degree of contamination	2
Measuring accuracy	±1 °C
WiFi frequency	2,412 MHz to approx. 2,472 MHz
Maximum transmission power	IEEE 802.11b: 18.29 dBm IEEE 802.11g: 19.30 dBm IEEE 802.11n: 18.41 dBm

Subject to technical changes at any time. Compatibility information provided without guarantee.

## 11.2 SUPPORT AND CONTACT

You can contact us for technical support.

We look forward to assisting you with your enquiry:

Phone: +49-(0)-6667-91847-0

E-mail: [support@eurotronic.org](mailto:support@eurotronic.org)

Customer service: **EUROtronic Technology GmbH**  
Südweg 1  
36396 Steinau-Ulmbach  
Germany

## 11.3 DISPOSAL



### INFORMATION

Please inform yourself about the options for returning old devices and used batteries free of charge at your retailer.



The adjacent symbol indicates that electrical and electronic apparatus no longer required must be disposed of separate from domestic waste in accordance with legal directives. Dispose of the device at a collection point provided by your municipal waste authorities.




Defective or spent batteries must be recycled according to Directive 2006/66/EC. Return batteries and / or the device via the recycling services offered.



Observe the identifications on the packaging when sorting the waste materials; the identifications are comprised of abbreviations (a) and numbers (b) and have the following significance: 1–7: plastics / 20–22: paper and cardboard / 80–98: composite materials.



Dispose of the packaging according to type. Dispose of cardboard and carton at waste paper collection points and foil at recyclables collection points. By recycling, material recovery or other forms of recycling, you are making an important contribution to protecting our environment.

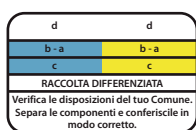

The logo only applies to Italy.

## 11.4 PERSONAL DATA

1. Delete all personal data from your user account of the **Eurotronic Smart Living 2.0** app before disposing of your CZW-250.

## 11.5 SIMPLIFIED DECLARATION OF CONFORMITY



EUROtronic Technology GmbH hereby declares that your CZW-250 complies with all applicable Community provisions of the European Economic Area Directive 2014/53/EU. The entire text of the EU Declaration of Conformity is available at the following Internet address:

<https://eurotronic.org/service/downloads>



## 11.6 WARRANTY NOTICE

The warranty period is 24 months and begins on the day of purchase. Keep your receipt as proof of purchase. During the warranty period, defective energy-saving controllers can be sent to the service address with sufficient postage. To do this, contact our Customer Service before returning the item. You will then receive a new or repaired device in return free of charge. Repair or replacement of the device does not begin a new warranty period. Note that we only guarantee the functions of the device, not the functionality between the interaction of the device and the valve base.

The application-related technical data are only guaranteed together with the valves Heimeier, Junkers Landys+Gyr, MNG, Honeywell Braukmann thread dimension (M30x1.5), Oventrop (M30x1.5) Danfoss RA, RAV and RAVL. The unit combinations are specified on our website ([www.eurotronic.org](http://www.eurotronic.org)). When operating your CZW-250 with third-party valves/adapters that are not listed, the functionality must be ensured by the user. EUROtronic does not provide warranty service in these cases.

After the warranty period has expired, you also have the option of sending the defective unit to the address provided, with sufficient postage, for the purpose of repair. Repairs required after the expiration of the warranty period are subject to a charge. Your statutory rights are not limited by this warranty.

## 11.7 MANUFACTURER

### **EUROtronic Technology GmbH**

Südweg 1, 36396 Steinau-Ulmbach  
Germany

+49 (0) 6667 91847-0

[support@eurotronic.org](mailto:support@eurotronic.org)

[www.eurotronic.org](http://www.eurotronic.org)



**EUROtronic Technology GmbH**  
Südweg 1 | 36396 Steinau-Ulmbach | Germany  
[www.eurotronic.org](http://www.eurotronic.org)